


Model 204, 207, 212, 218

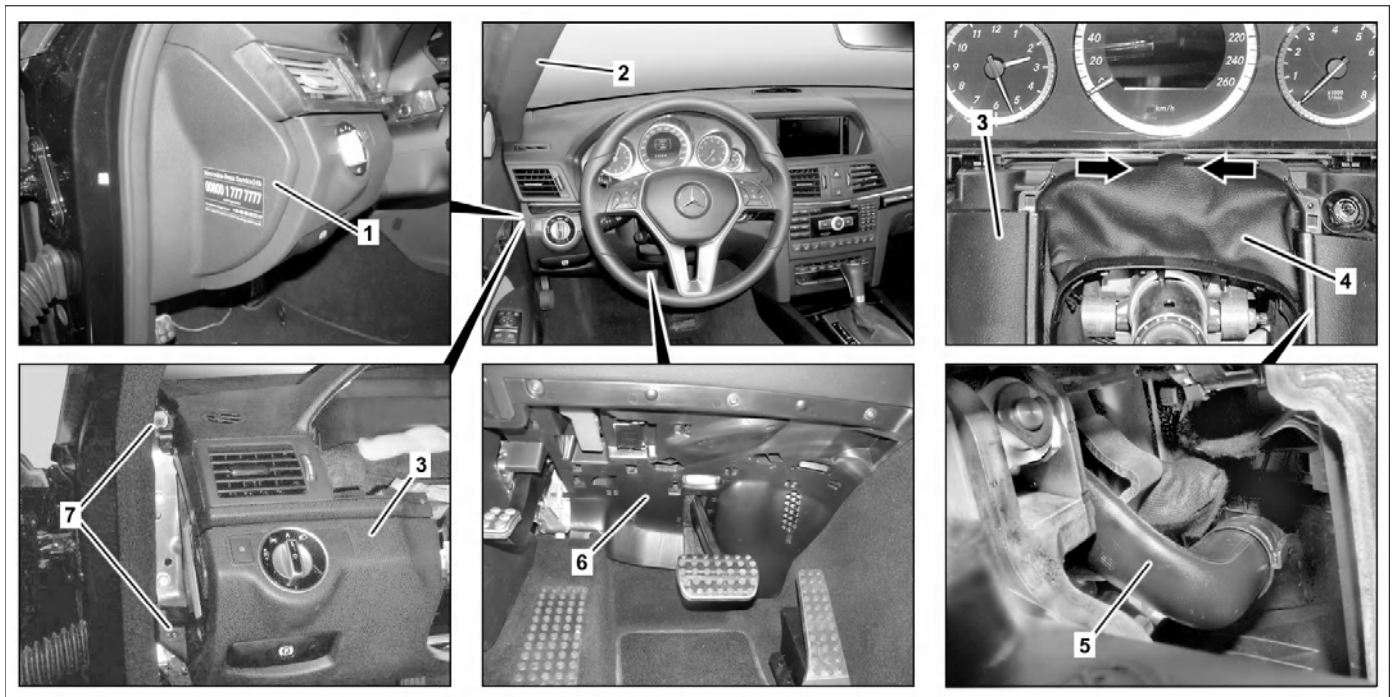

P91.60-4432-09


Shown with model 204.0

- 1 Cover
- 2 Left A-pillar paneling
- 3 Instrument panel

- 4 Steering column tube cover
- 5 Additional fan air duct

- 6 Cover
- 7 Bolts

- 8 Nut
- 9 Driver kneebag
- 10 Electrical connector
- 11 Nut
- 12 Left bracket
- 13 Right bracket
- 14 Bolts

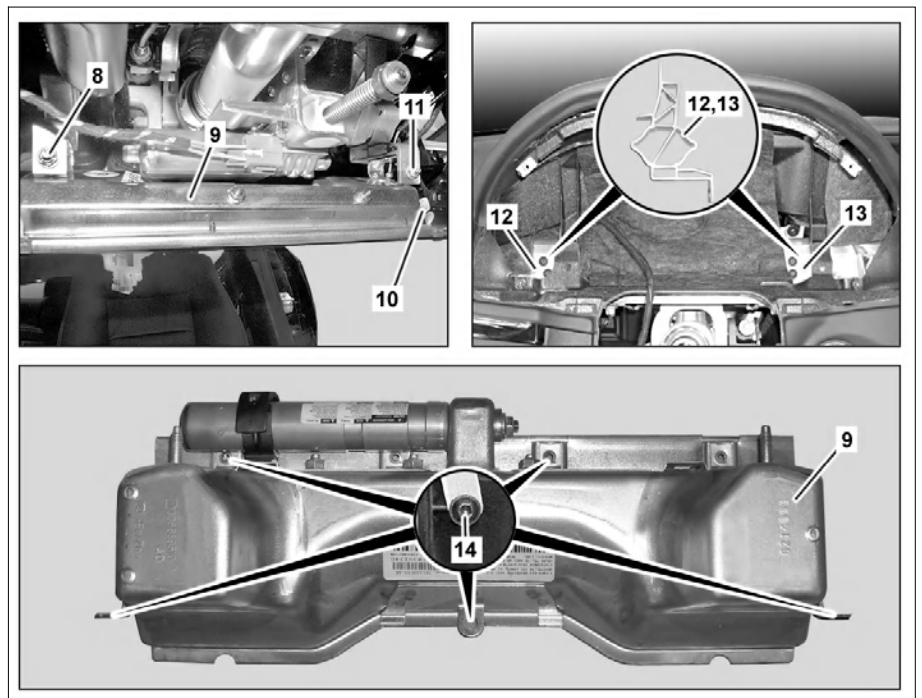

P91.60-4433-06

<p>Warning</p>	<p>Risk of injury during testing and repair operations related to pyrotechnical components</p>	<p>Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts.</p>	<p>AS91.00-Z-0008-01A</p>
	<p>Notes on self-locking nuts and bolts</p>		<p>AH00.00-N-0001-01A</p>

10	Remove foam element in area of left bracket (12)	Model 204, 207, 212	
11	Remove screw/bolts (7)		
12	Unscrew nut (8)	Nut, kneebag to crossmember	*BA91.60-P-1003-01M
13	Remove left bracket (12)	Model 207	
14	Unscrew nut (11) and remove right bracket (13)	Nut, kneebag to crossmember	*BA91.60-P-1003-01M
15	Remove screws/bolts (14)	Screw/bolt, kneebag to instrument panel (below the cover under instrument panel)	*BA91.60-P-1016-01M
16	Remove instrument panel (3) in direction of vehicle interior with aid of a second person, remove driver kneebag (9) from instrument panel (3) and guide into footwell until electrical connector (10) can be disconnected	Lift instrument panel (3) just far enough in the direction of the vehicle interior that the driver kneebag (9) can be removed. The instrument panel (3) may be damaged otherwise.	
17	Release and disconnect electrical connector (10), remove driver kneebag (9)	Removal lever	*203589043300
18	Install in the reverse order		
	Check		
19	Check and erase vehicle fault memory using the diagnostic system	After replacing the driver kneebag (9).	

Airbag

Number	Designation		Model 204.0/2/9	Model 204.3
BA91.60-P-1003-01M	Nut, kneebag to crossmember	Nm	8	8

Airbag

Number	Designation		Model 207	Model 212
BA91.60-P-1003-01M	Nut, kneebag to crossmember	Nm	8	8

Airbag

Number	Designation		Model 218
BA91.60-P-1003-01M	Nut, kneebag to crossmember	Nm	8

Airbag


Number	Designation		Model 204.0/2/9	Model 204.3
BA91.60-P-1016-01M	Screw/bolt, kneebag to instrument panel (below the cover under instrument panel)	Nm	2	2

Airbag

Number	Designation		Model 207	Model 212
BA91.60-P-1016-01M	Screw/bolt, kneebag to instrument panel (below the cover under instrument panel)	Nm	2	3,9


Airbag

Number	Designation		Model 218
BA91.60-P-1016-01M	Screw/bolt, kneebag to instrument panel (below the cover under instrument panel)	Nm	3,3

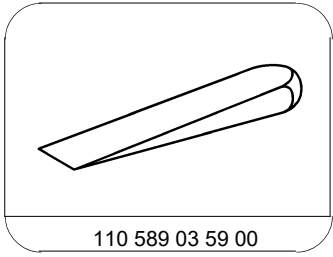

110 589 03 59 00

Mounting wedge

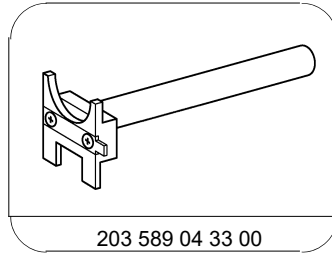

203 589 04 33 00

Removal lever