

P68.30-3441-09


Shown with TIREFIT equipment

- 1 Rear center section paneling
- 2 Clip

- 3 Mount
- 4 Mount

- 5 Nut
- 6 Spare tire well paneling
- 7 Vehicle jack

☒ ☒	Remove/install		
1	Lift luggage compartment floor paneling		
2	Remove vehicle jack (7)		
3	Pull spare wheel well panel (6) on rear center section paneling (1) to side in area of right nut (5)	When equipped with TIREFIT.	
4	Loosen nut (5) until rear center section paneling (1) is accessible		
5	Unclip rear center section panel (1) and remove upward	<p>i Installation: Check clips (2) for damage, replace if necessary. Carefully position rear center section panel (1) in area of mounts (3, 4) to prevent damaging rear center section paneling (1).</p> <p>☒</p>	*110589035900
6	Install in the reverse order		

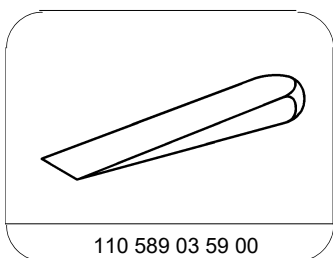

110 589 03 59 00

Mounting wedge