

MODEL 207.3

- 1 Left side paneling
- 2 3 Carrier plate cover Right side paneling
- 4 Rear center section paneling
- 5 Trunk floor paneling

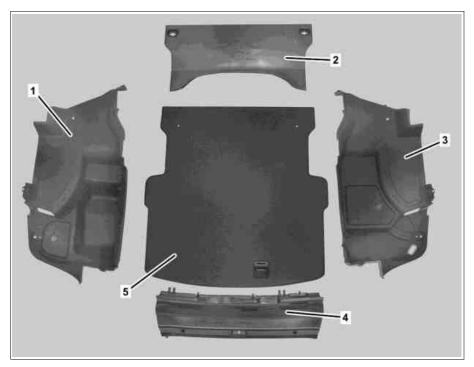

P68.30-3450-06

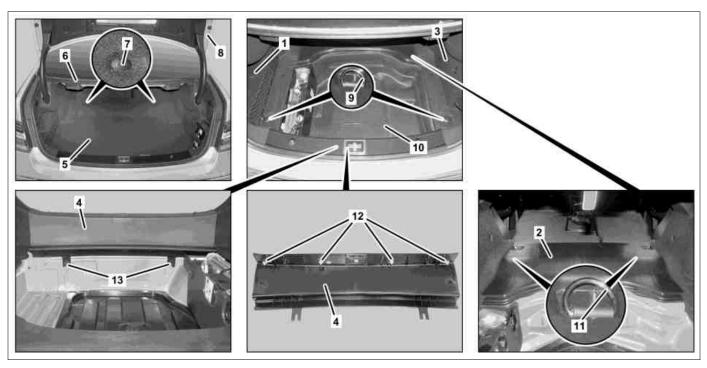


P68.30-3464-09

Shown on vehicle equipped with Tirefit 1 Left side paneling

- 2 Carrier plate cover
- 3 Right side paneling
- Rear center section paneling
- *4 5* Trunk floor paneling

- Frame seal
- Clip
- Trunk lid 8
- Anchoring lug

- Spare wheel well panel (only with TIREFIT equipment)
 Anchoring lug 10
- Clip 12
- 13 Nuts

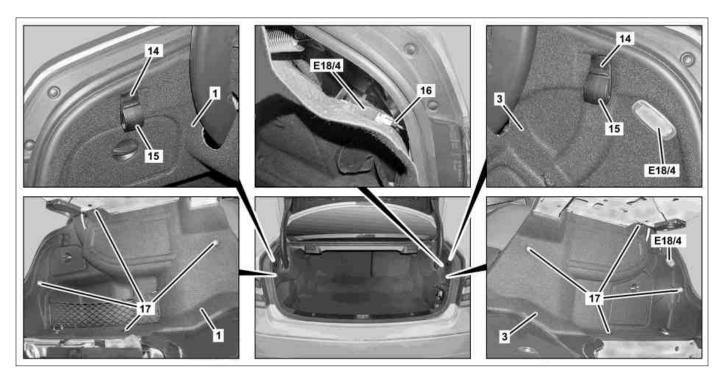

P68.30-3449-09


Shown on vehicle equipped with Tirefit 1 Left side paneling 3 Right side paneling


- 1 3 14
- Pin

- Pocket hook 15
- 16 Electrical connector 17 Expansion clip

E18/4 Right luggage compartment lamp

XX	Remove/install		
1.1	Lift trunk floor paneling (5) and hook into sealing frame (6) on trunk lid (8)	If carrier plate cover (2) is not removed.	
1.2	Remove clips (7) and remove trunk floor paneling (5)	When removing carrier plate cover (2), left side paneling (1) or right side paneling (3).	*452589016300
2	Remove spare tire well paneling (10)	Only if equipped with TIREFIT	
3	Loosen nuts (13) on rear center section paneling (4)	i Do not unscrew nuts (13) completely.	
4	Unclip rear center section paneling (4) with assembly wedge from clips (12) and remove upward	installation: Check clips (12) for damage, replace if necessary.	
		3	*110589035900
5	Fold over left and right rear seat backrest	When removing left side paneling (1) and right side paneling (3).	
6	Remove anchoring lug (11) on left and right from carrier plate cover (2) and remove carrier plate cover (2)		
7	Remove anchoring lug (9) from left side paneling (1) and right side paneling (3)		
8	Remove expansion clips (17) from left side paneling (1) and right side paneling (3)	3	*452589016300
9	Pull pin (14) out pocket hook (15) and remove pocket hook (15) from left side paneling (1) and right side paneling (3)	8	*452589016300
10	Disconnect electrical connector (16) from right trunk lamp (E18/4)		
11	Loosen from left side paneling (1) and right side paneling (3) in lower area of wheel wells, pull toward center of trunk and remove.		
12	Install in the reverse order		

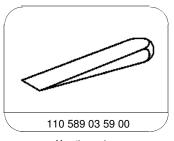

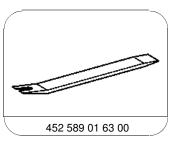

Mounting wedge

Snap-release tool