







P68.10-4132-09

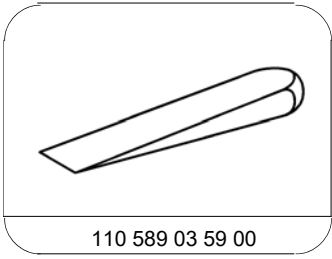
Shown on code (512) COMAND APS with DVD changer

- 1 Glove box lid
- 2 Side cover
- 3 Cover
- 4 Glove compartment
- 5 Screw
- 6 Screw

- 7 Bolts
- 8 Electrical connector
- 9 Electrical connector
- 10 Retaining tab
- 11 Shock absorber ??
- 12 Locking pin

- E13/1 Glove box lamp
- X39/45 AUX jack electrical connector
- X58/31 Glove box socket

 	Remove/install		
1	Remove cover (3) below dashboard on right		AR68.10-P-1520CW
2	Remove side covering (2).		*110589035900
3.1	Remove electrical connector on AUX connector (X39/45) from glove compartment (4).	On vehicles without code (518) Media interface	AR68.10-P-1400-01CW
3.2	Remove electrical connector on media interface (X18/70) on glove box (4)	On vehicles with code (518) Media Interface	AR68.10-P-1400-02CW
4	Unscrew bolt (5)	Rechargeable drill / screwdriver gotis://G 58.0 01.1	
5	Remove bolt (6)	Rechargeable drill / screwdriver gotis://G 58.0 01.1	
6	Open glove box lid (1) and unscrew bolts (7)	 Installation: Tighten bolts (7) starting from center of vehicle. Rechargeable drill / screwdriver gotis://G 58.0 01.1	
7	Pull glove compartment (4) out of dashboard until electrical connectors (8, 9) are accessible.	 Installation: Ensure that retaining tabs (10) are seated correctly in crossmember below dashboard.	
8	Disconnect electrical connector (8) from glove box lamp (E13/1)		
9	Disconnect electrical connector (9) from glove box socket (X58/31) and remove glove box (4)		
10	Unlock locking pin (12) on damper (11) and pull out	When replacing damper (11).  Installation: Check locking pin (12) for damage, replace if necessary. Retaining pin (12) must catch audibly.	
11	Remove damper (11) from glove box (4)	When replacing damper (11).	
12	Install in the reverse order		



110 589 03 59 00

Mounting wedge