


AR68.10-P-1400-02CW	Remove, install electrical connector on media interfaceon glove box		
---------------------	---	--	--

i Work procedure shown on model 212.


- 1 Open lid of glove box (1).
- 2 Unclip cover (2) from media interface electrical connector (X18/70) and remove.

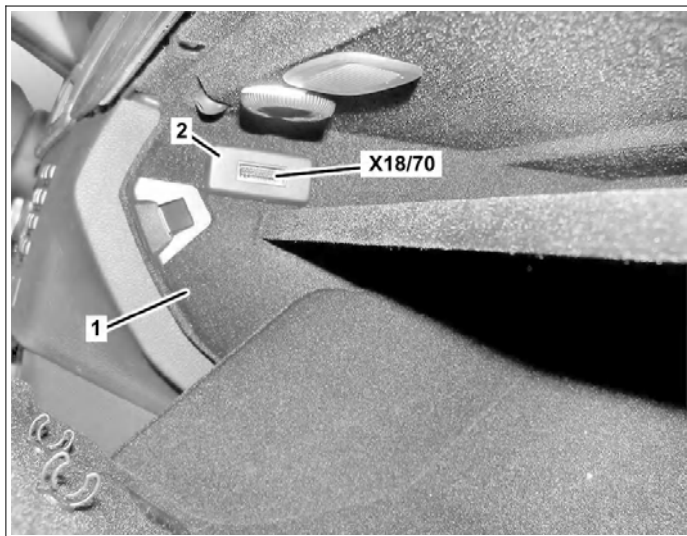

P68.10-4150-11

- 3 Unlock media interface electrical connector (X18/70) from catch hooks (3) on glove compartment (1) and guide media interface electrical connector (X18/70) out of glove compartment (1) toward rear.
- i** Ensure that catch hooks (3) locks correctly on glove box (1).

- 4 Install in the reverse order.

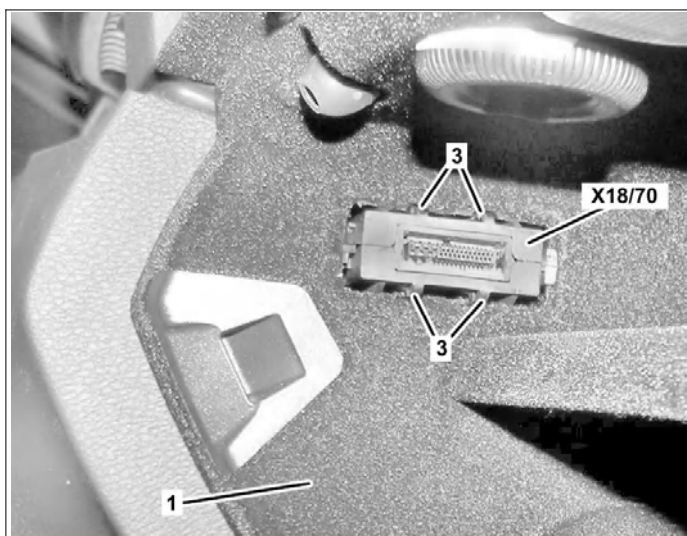

P68.10-4149-11