




P77.31-2214-01

Connection hole in soft top canvas with manufacture data as of 22.02.07

Assembly sequence:

- 1 *Elastic band*
- 2 *Cable holder*
- 3 *Tensioning strap*
- 4 *Rivet*

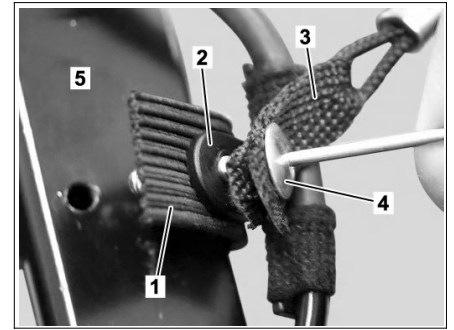

P77.31-2215-01

- 1 Attach long elastic band (1) to modified new connection hole on rear window lever (5).

i Observe assembly sequence for mounts.