


- 1 Spread soft top canvas (2) on clean subsurface.
- 2 Cut water bag (1) on dotted line along cuff (area A)
- 3 Mark cutting line by connecting both points (arrows).
- 4 Cut off fastening shackle (3) of water bag (area B).

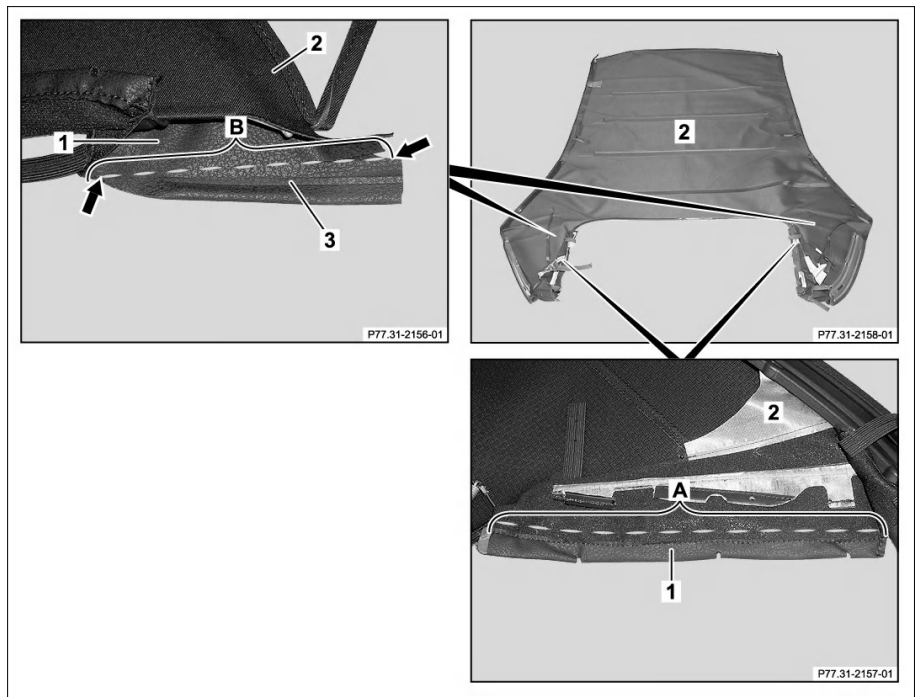

P77.31-2155-06