

| AR68.30-P-4050-03LW | Detach/attach A-pillar trim |  |
|---------------------|-----------------------------|--|

Model 205.4 Model 238.4

## **Modification notes**

|            |                        | -      |  |
|------------|------------------------|--------|--|
| 28.02.2019 | Special tool replaced. | Step 5 |  |

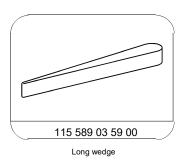

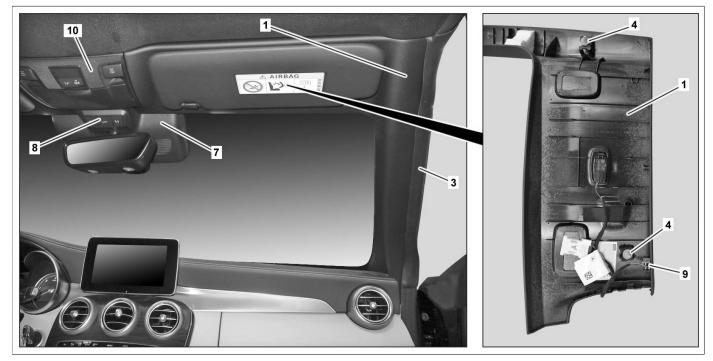

P68.30-3966-09

Shown on right side of vehicle, model 205.4

1 Detach cover (7).

2 Unclip cover (8).

6 Model 238.4 Remove top A-pillar paneling (1) until electrical connector of hands-free system microphone can be disconnected. 3 Remove cover (7).

i Model 205.4, 238.4 with code 351 (Emergency call system (HERMES)) It is not necessary to disconnect the electrical connector from the emergency call system button group.

4 Detach edge guard (3) in area of A-pillar paneling (1).

> **i** Installation: Ensure that edge guard (3) is seated correctly.

Unclip A-pillar paneling (1) from the retaining clips (4) 5 with S long wedge.

- 7 Model 238.4 Disconnect electrical connector of hands-free system microphone.
- 8 Model 205.4 with code 876 (Interior Light package) Model 238.4 Disconnect electrical connector (9) from overhead control panel (10).
- Pull A-pillar paneling (1) towards rear and up out of instrument panel, and remove. 9
- 10 Install in the reverse order.