


## ExpressAlign®

### Mercedes-Benz 1986-95 124.05/128/13 Sport Suspension

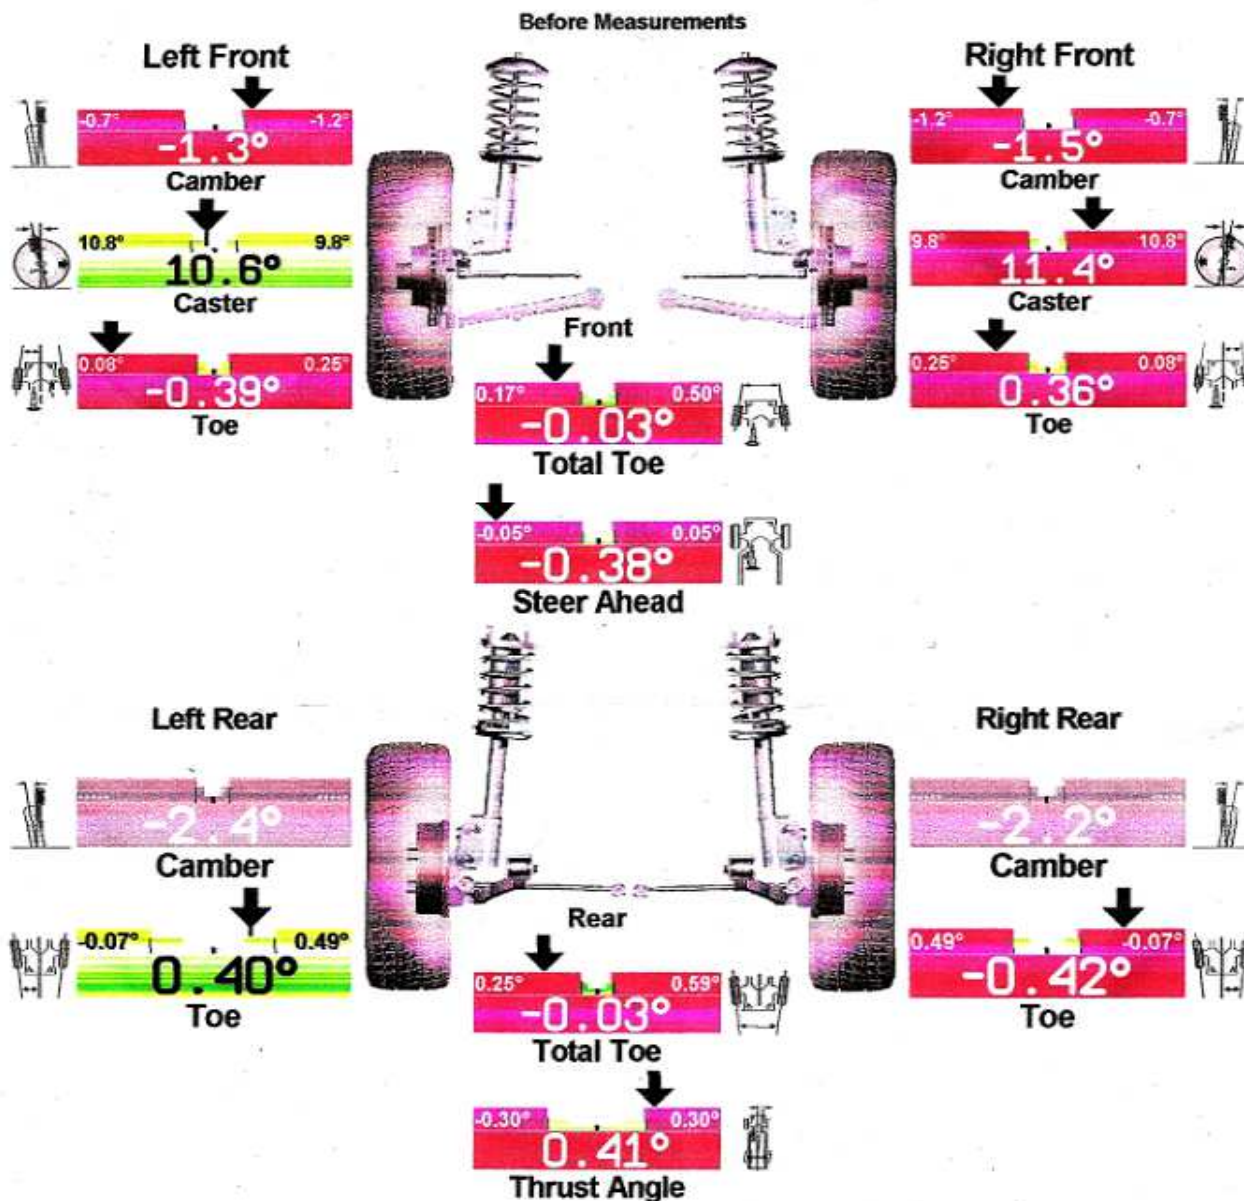

### Recommended Procedure

1. Adjust Rear Toe
  2. Adjust Left Front Camber and Caster with Cams
  3. Adjust Right Front Camber and Caster with Cams
  4. Adjust Toe with WinToe
- Total toe will be corrected by adjusting individual toe.
  - Steer ahead will be corrected by adjusting individual toe.
  - Thrust angle will be corrected by adjusting individual toe.
  - The steering wheel was not level before the alignment. Toe adjustments are required.
  - The steering wheel is currently not level. Toe adjustments are required.