
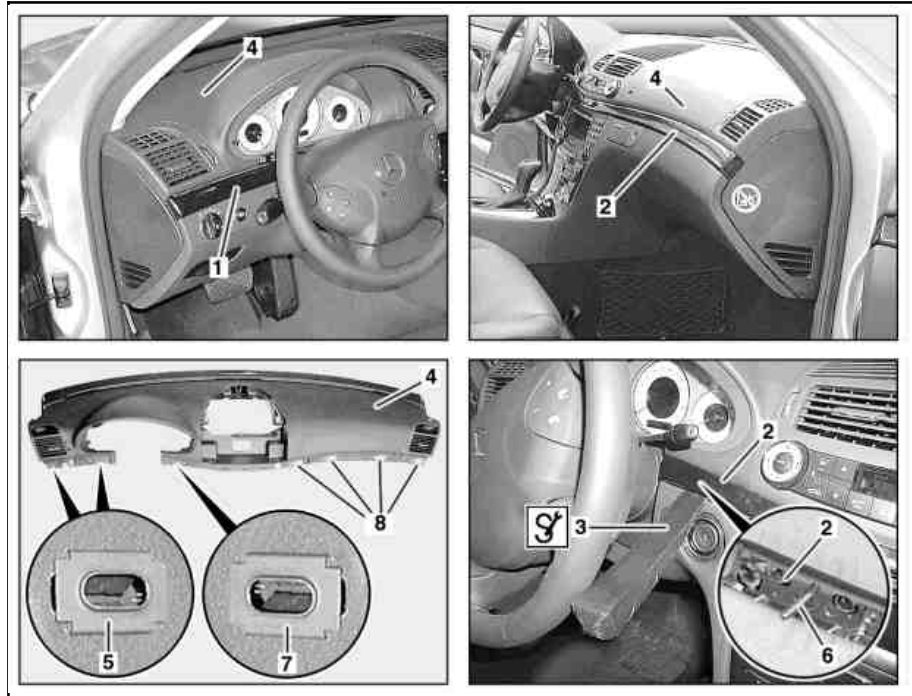








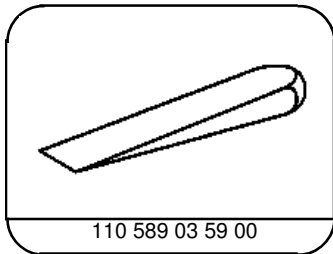
MODEL 211.0/ 2/ 6

- 1 Left trim strip
- 2 Right trim strip
- 3  Mounting wedge
- 4 Instrument panel
- 5 Clip-type fastener
- 6 Grub screw
- 7 Clip-type fastener
- 8 Slots



P68.10-2720-06

 	Remove/Install		
1	Unclip left trim strip (1) from clip fasteners (5) in instrument panel (4) with mounting wedge (3).		*110589035900
2	Unclip right trim strip (2) at threaded pin (6) out of the clip-type fastener (7) using mounting wedge (3)		*110589035900
3	Slide right trim strip (2) to the right and detach from the instrument panel (4)	<p> The right trim strip (2) is fastened in the oblong holes (8) in the instrument panel (4).</p> <p> Installation: Replace damaged clip-type fastener (7).</p>	
4	Install in the reverse order		



110 589 03 59 00

Mounting wedge