


MODEL 211.0 /2 /6 up to 31.5.06

with CODE (614) Bi-xenon headlamp unit

with CODE (615) Bi-xenon headlamp unit with integrated curve illumination

Shown on model 211.0

- 1 Front entrance paneling
- 2 Front edge guard
- 3 Rear entrance paneling
- 4 Rear edge guard

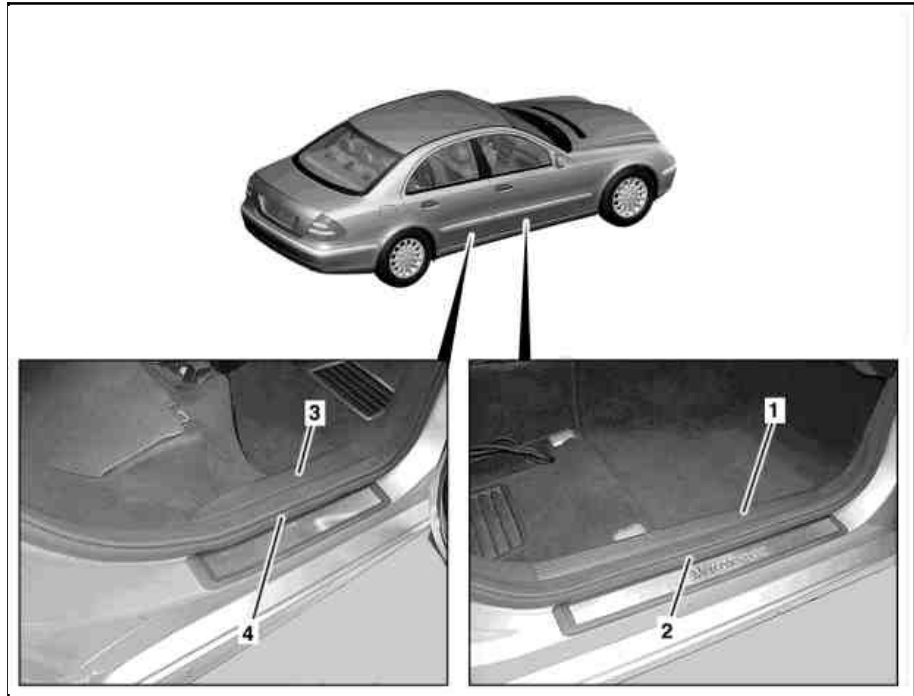


P82.10-3001-06

Shown on model 211.0

- 5 Wiring harness
- 6 Rear footwell air grate
- 7 Rear floor covering
- 8 B-pillar paneling
- 9 Electrical connector
- 10 Nut

N71 Headlamp range adjustment control unit

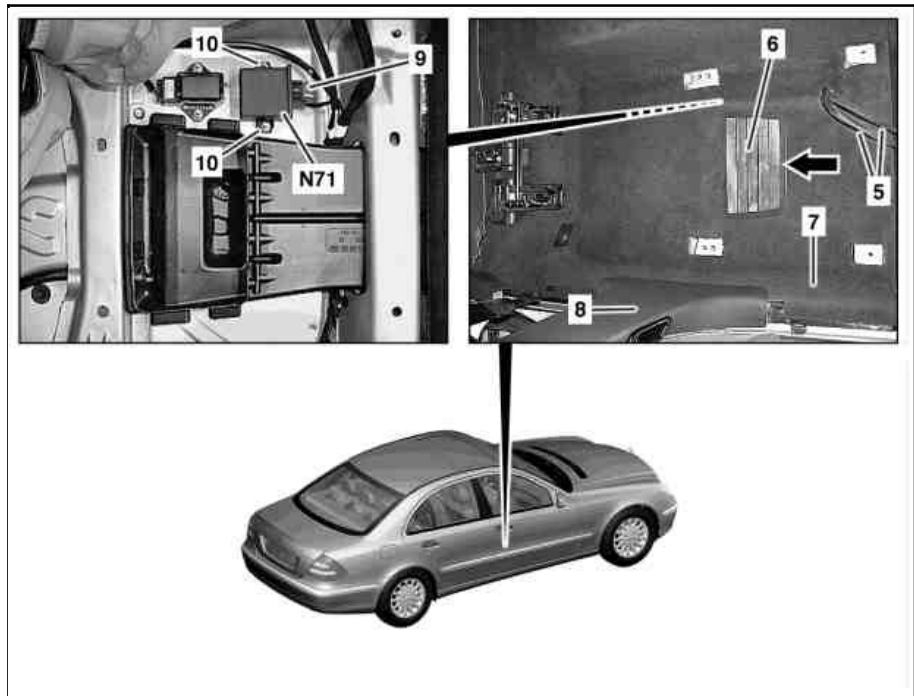

P82.10-3000-06

	Remove/install	
⚠	Notes on avoiding damage to electronic components due to electrostatic discharge	AH54.00-P-0001-01A
1	Remove right front seat	AR91.10-P-1000T
2	Detach front edge guard (2) in the area of the front entrance paneling (1)	
3	Remove front entrance paneling (1)	
4	Detach rear edge guard (4) in the area of the rear entrance paneling (3)	
5	Remove rear entrance paneling (3)	
6	Unclip rear footwell air grate (6) (arrow) and	

7	Pull rear floor covering (7) forward under the B-pillar paneling (8)		
8	Lift up rear passenger compartment floor covering (7).		
9	Guide electrical wiring harness (5) out of the rear floor covering (7)		
10	Unscrew nuts (10) and remove headlamp range adjustment control unit (N71)		
11	Disconnect electrical connector (9).		
12	Install in the reverse order		
13.1	Check the headlamp setting; correct it if necessary Check and correct headlamp adjustment	When installing a new headlamp range adjustment control unit (N71).	AP82.10-P-8260T

