



MODEL 211

with CODE (494) USA version
except CODE () as of Model Year 2006

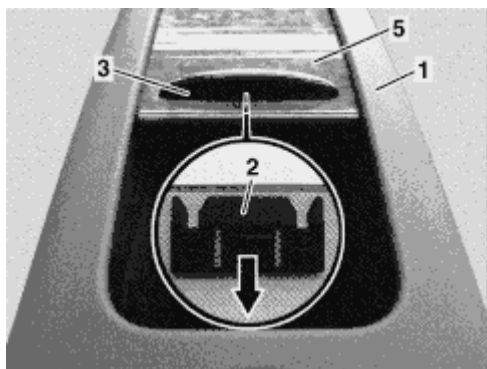

- 1 Center console upper section
- 2 Retaining clip
- 3 Roller blind handle
- 5 Roller blind

P68.20-3812-01

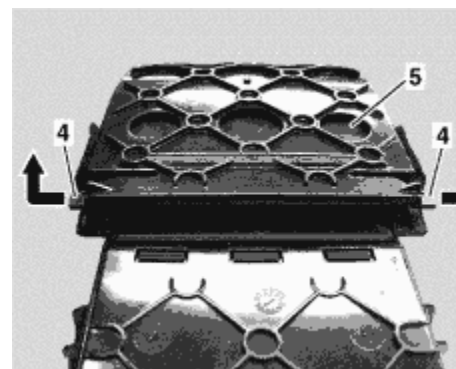

- 4 Stops
- 5 Roller blind

P68.20-3813-

	Remove/install		
1	Remove center console upper section (1).	Do not remove center console lower section.	AR68.20-P-2000T
2	Lay center console upper section (1) down on clean surface	Avoid damage.	
3	Slide retaining clip (2) toward rear (arrow) and remove roller blind handle strip (3)		
4	Turn center console upper section (1).		
5	Carefully lift stops (4) (arrows) and slide roller blind (5) out of guide rail.	Risk of fracturing!	
6	Install in the reverse order		