
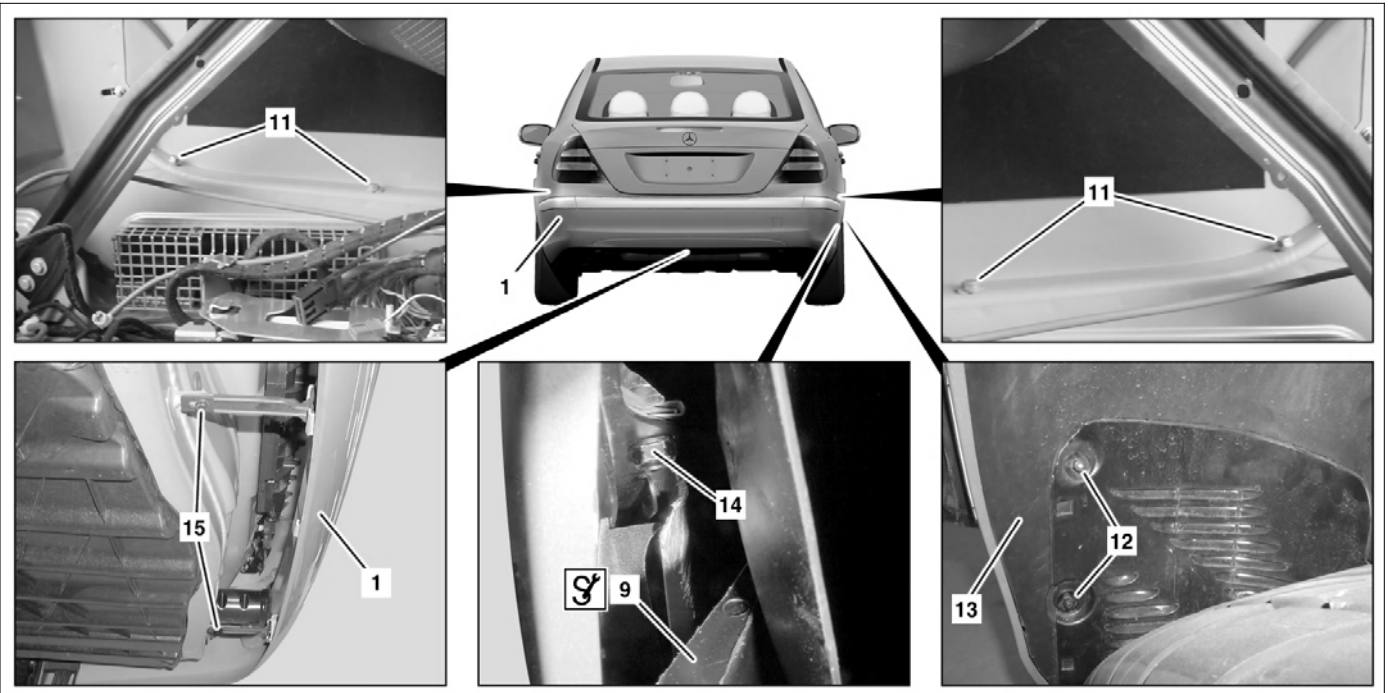



P88.20-2252-09

- 4 Electrical connector (with code (889) Keyless Go)
- 5 Electrical connector (with code (220) Parktronic system (PTS))
- 6 Nuts
- 7 Nut
- 8 Left fender liner
- 9  Mounting wedge
- 10 Bolt







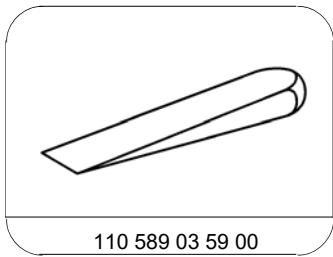
P88.20-2253-09

- 1 Rear bumper
- 9  Mounting wedge
- 11 Bolts
- 12 Nuts
- 13 Right fender liner
- 14 Bolt
- 15 Bolts

**Modification notes**

23.1.07	Repair method modified. Left and right side paneling in trunk is only loosened.	
---------	---	--

1	Remove trim from rear end center assembly		AR68.30-P-4785T
2	Remove spare tire well paneling		
3	Loosen left and right side paneling in trunk	On vehicles without code (287) Through-loading feature, except CODE (924) Bivalent natural gas drive On vehicles with code (287) Through-loading feature.	AR68.30-P-4800T AR68.30-P-4800TA
4	Separate electrical connectors (4)	On vehicles with code (889) Keyless Go.	
5	Disconnect electrical connectors (5)	On vehicles with code (220) Parktronic system (PTS).	
6	Unscrew nuts (6)		
7	Loosen pressure reservoir with lines connected and lay down to side.	On vehicles with code (489) Airmatic (semi-active air suspension).	
8	Remove bolts (11)		
9	Remove nut (7)		
10	Loosen left inner fender (8) from fender with assembly wedge (9)	 Until screw (10) is accessible. 	*110589035900
11	Unscrew bolt (10)		
12	Unscrew nuts (12)		
13	Loosen right inner fender (13) from fender with assembly wedge (9)	 Until screw (14) is accessible. 	*110589035900
14	Unscrew bolt (14)		
15	Remove bolts (15)		
16	Remove rear bumper (1)		
17	Install in the reverse order		



110 589 03 59 00

Assembly wedge