
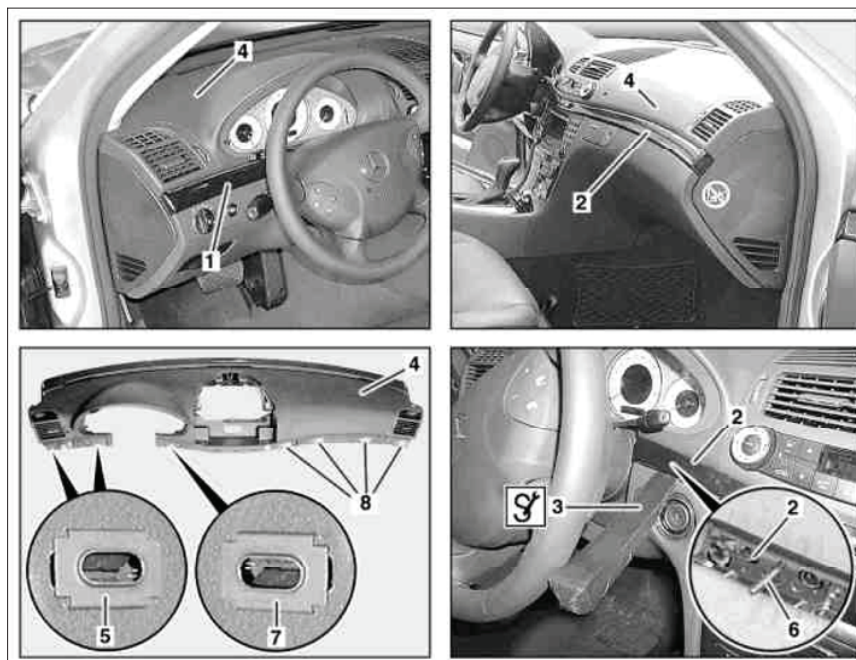








MODEL 211.0/ 2/ 6

- 1 Left trim strip
- 2 Right trim strip
- 3  Mounting wedge
- 4 Instrument panel
- 5 Clip-type fastener
- 6 Grub screw
- 7 Clip-type fastener
- 8 Slots



P68.10-2720-06

	Remove/Install		
1	Unclip left trim strip (1) from clip fasteners (5) in instrument panel (4) with mounting wedge (3).		*110589035900
2	Unclip right trim strip (2) at threaded pin (6) out of the clip-type fastener (7) using mounting wedge (3)		*110589035900
3	Slide right trim strip (2) to the right and detach from the instrument panel (4)	 The right trim strip (2) is fastened in the oblong holes (8) in the instrument panel (4).  Installation: Replace damaged clip-type fastener (7).	
4	Install in the reverse order		

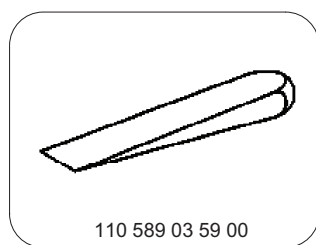

110 589 03 59 00

Mounting wedge