


MODEL 211.0 /2 /6

Paneling on upper A-pillar

Shown on model 211.0 with code (290)
Windowbag

- 1 Edge guard
2 A-pillar paneling

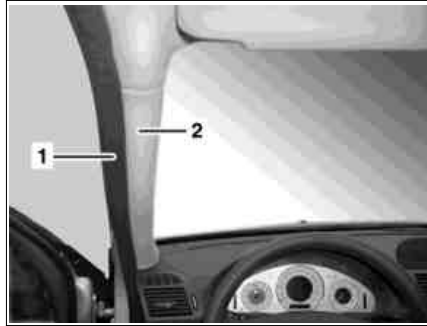


P68.30-2478-01



P68.30-2479-01

☒ ☒	Remove/install		
ⓘ	Note on function reliability of windowbag		AH91.60-P-0693-01A
1	Remove edge guard (1) in area of A-pillar paneling (2)		
2	Press A-pillar paneling (2) off of A-pillar	<p>ⓘ Move assembly wedge directly to each clip (arrows) and press off.</p> <p>☒</p> <p>ⓘ Installation: Check whether clips (arrows) are seated tightly.</p>	*110589035900
3	Remove A-pillar paneling (2) out of instrument panel guide upward		
4	Install in the reverse order		

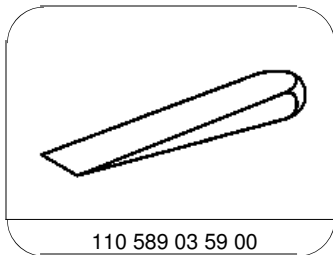

110 589 03 59 00

Wedge tool