


MODEL 211.0 with CODE (287) Through-loading feature

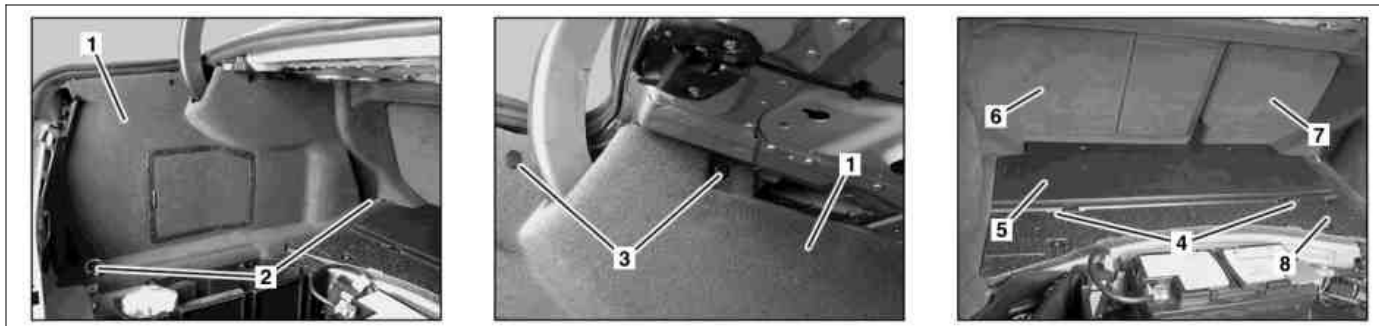

P68.30-3046-07

Shown on paneling on left

1 Side paneling in trunk
 2 Anchoring lugs
 3 Expanding rivets

4 Bolts
 5 Carrier plate cover
 6 Left rear seat backrest

7 Right rear seat backrest
 8 Damping

	Remove/Install		
1	Fold over left rear seat backrest (6) and right rear seat backrest (7)	See Operating Instructions	
2	Remove anchoring lugs (2)	Note correct installation positions. 	*BA68.50-P-1003-03B
3	Remove expansion rivets (3)		
4	Remove damping (8)		
5	Unscrew bolts (4) and remove carrier plate cover (5) from trunk.		
6	Remove side paneling in trunk (1)	Installation: Ensure that side paneling is seated correctly in trunk (1) in relation to rear center section paneling.	
7	Install in the reverse order		

Cargo retainers

Number	Designation	Model
BA68.50-P-1003-03B	Bolt for anchoring lug to trunk floor	211
		Nm 23