


# “CAMBER” REAR LOWER CONTROL

## ALLOY “CAST” ARMS


- 1 Small tooth washers under bolt head.
- 2 Tongue washer seated in groove in alloy arm (nut end)
- 3 Place large washer on next then tab lock washer and nut.

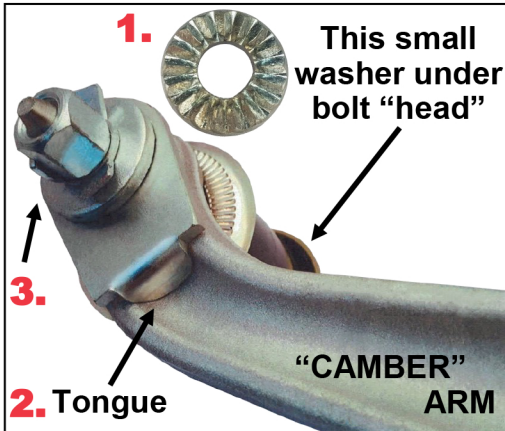

## ARM INNER MOUNTS



## STEEL or ALLOY “PRESSED” ARMS

Use the large flat washer both sides of arms

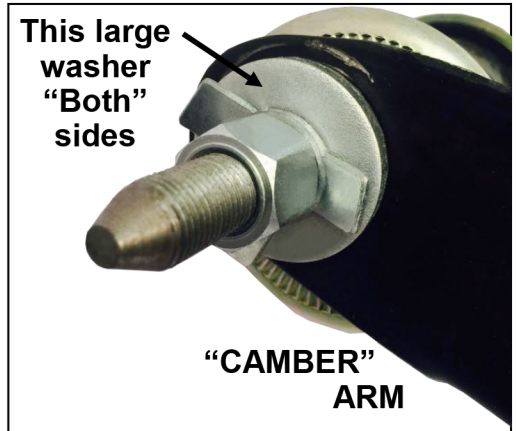

## “TOE” ADJUSTMENT:

W211, 219, (“Rear” - Mounted  
230, 231 Toe Arms)

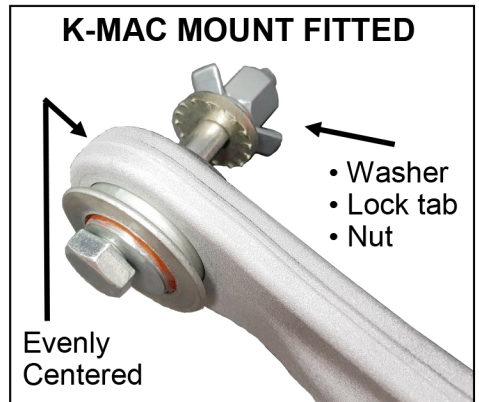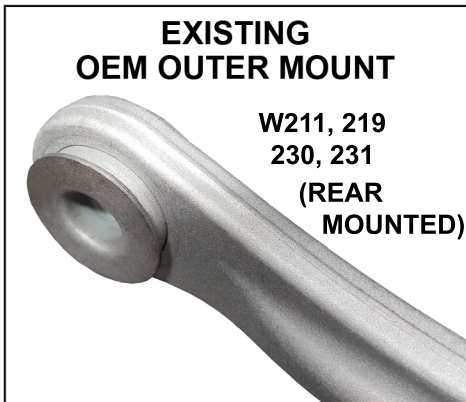

\* W216, 221, 222 (“Front” - Mounted TOE Arms)

\* Place the thin tube over K-MAC adj. mount before inserting