



MODEL 211.0/ 2/ 6

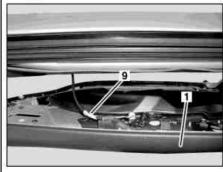


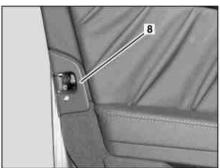

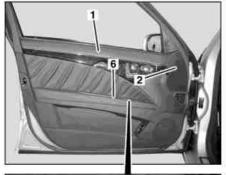

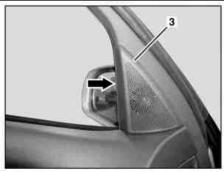



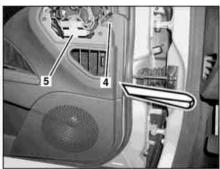

P72.10-2382-09

- 1 Door lining
- 2 Cover

8.1.04

3 Mirror triangle cover

4 Bolt

Disconnect/connect/remove ground lead from battery


- 5 Male multipoint connector
- 6 Armrest cover

- 7 Bolts
- 8 Door lock cover
- 9 Bowden cable

## **Modification notes**

XX	Remove/Install			
1	Lower window in front door	Ιi	Soc operator's manual	

XX	Remove/Install		
1	Lower window in front door	i See operator's manual.	
2	Unclip mirror triangle cover (3) (arrow) and disconnect electrical connector from tweeter		
3	Remove cover (2) from door lining and remove		
4	Unscrew screw (4) and unclip male multipoint connector (5)		
5	Unclip armrest cover (6) and unscrew bolts (7 below		
6	Remove covering of door lock (8)		
7	Pry off door lining (1) from inner door panel with mounting wedge at mounting clips	Move mounting wedge (1) directly onto each mounting clip and ensure that the retainer tabs of the mounting clips do not tear out of the door lining (1)    Installation: Replace damaged mounting clips.	*110589035900
8	Lift door lining (1) upward and simultaneously pull away from inner door panel until Bowden cable (9) is accessible		
9	Remove Bowden cable (9) at inner door opener		
10	Disconnect electrical connectors between door lining (1) and front door control module		
11	Remove door lining (1)		
12	Install in the reverse order		

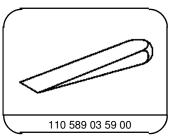

Mounting wedge