


MODEL 211.0 /2 /6 with CODE (551a) Anti-theft alarm system (ATA)

- 1 Nuts  
 2 Bracket  
 3 Tie strap  
 4 Electrical connector  
 5 Bolt

H3 Alarm signal horn

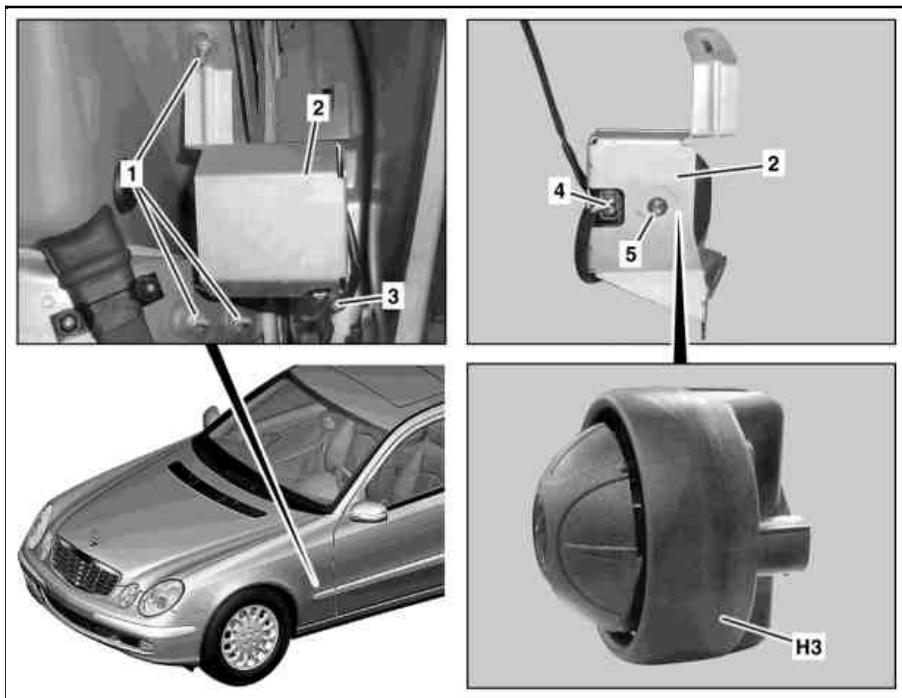

P80.50-2277-06

Remove/Install			
1	Disconnect battery ground cable	Model 211.0/6 Model 211.2	AR54.10-P-0003T AR54.10-P-0003TA
2	Remove rear inner fender from left front fender		AR88.10-P-1300T
3	Unscrew nuts (1) and remove bracket (2) with alarm signal horn (H3) from fender	<b>Installation:</b> Replace nuts (1), otherwise the strength of the screwed connection is not ensured	
4	Remove tie straps (3)		
5	Disconnect electrical connector (4)	Before disconnecting electrical connector (4), ensure that anti-theft alarm (ATA) is deactivated, otherwise alarm signal horn (H3) is activated.	
6	Unscrew bolt (5) and remove alarm horn (H3) from bracket (2)	 	*BA80.50-P-1001-01B *WH58.30-Z-1033-06A
7	Install in the reverse order		

## Anti-theft alarm

Number	Designation	Model 211
BA80.50-P-1001-01B	Bolt, alarm horn to bracket	Nm 10

## Commercially available tools

Number	Designation
WH58.30-Z-1033-06A	Screwdriver bit for internal Torx bolt with pin guide