


MODEL 211.0 with CODE (287a) Through-loading feature

MODEL 211.2

Shown on model 211.0

- 1 Armrest
2 Retaining bolt

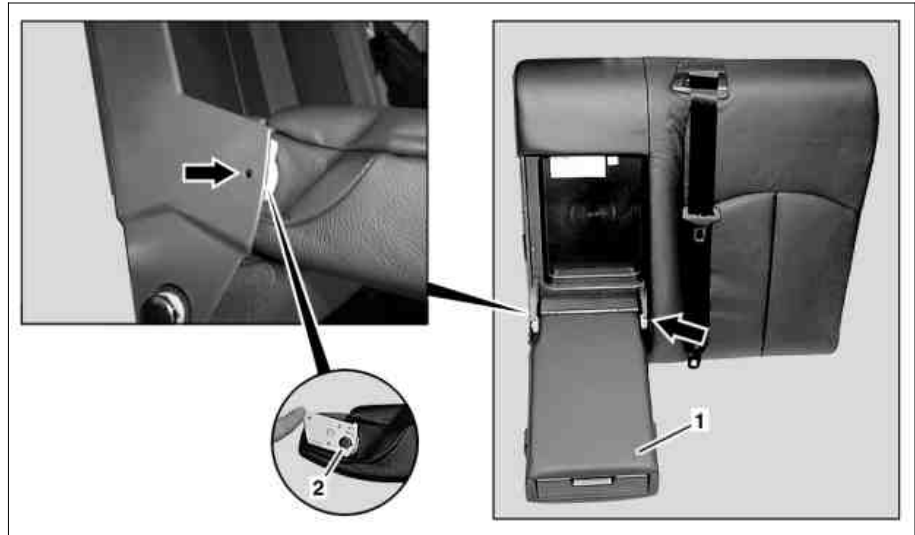

P91.12-2378-05

	Remove		
1	Fold right rear seat backrest forwards	See Operating Instructions	
2	Fold armrest (1) out of left rear seat backrest		
3	Push back right retaining bolt (2) through access cover (arrow) and release armrest (1)		
4	Push back left retaining bolt (arrow) between paneling and armrest (1) and pull armrest (1) out of left rear seat backrest		
	Install		
5	Insert armrest (1) in left rear seat backrest until armrest (1) audibly engages		
6	Fold back armrest (1) in left rear seat backrest		
7	Fold back right rear seat backrest	See Operating Instructions	