


MODEL 211.2/ 6

Shown on model 211.2

- 1 Handle strip
- 2 Nut
- 3 Bolts

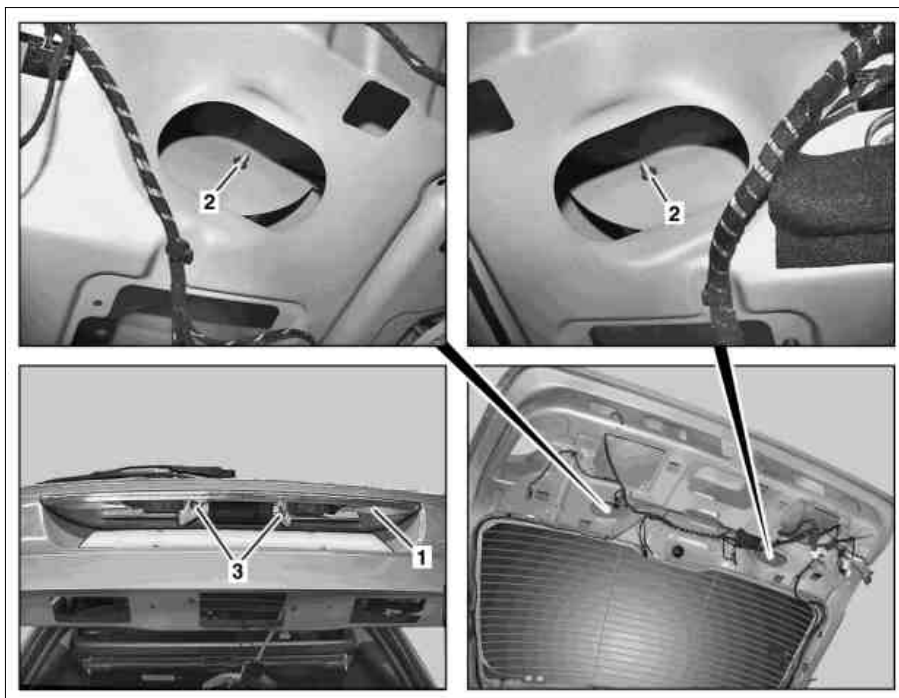

P72.20-2315-06

	Remove/install		
1.1	Remove all panelings from rear-end door.	Model 211.2	AR72.20-P-3520T
1.2	Remove present panelings from rear-end door until nuts (2) on left and right are accessible.	Model 211.6 The presence or execution of panelings depends on the vehicle equipment.	
2	Unscrew nuts (2)		*BA72.20-P-1007-02A
3	Unscrew screws (3) and remove handle (1)		*BA72.20-P-1006-02A
4	Install in the reverse order		

Tailgate

Number	Designation		Model 211.2	Model 211.6
BA72.20-P-1006-02A	Bolts on handle	Nm	3.5	3.5
BA72.20-P-1007-02A	Nut for tailgate handle	Nm	3.5	3.5