


MODEL 211.0 /2 /6

- 1 Gas pressure strut
 2 Retainer
 3 Screwdriver

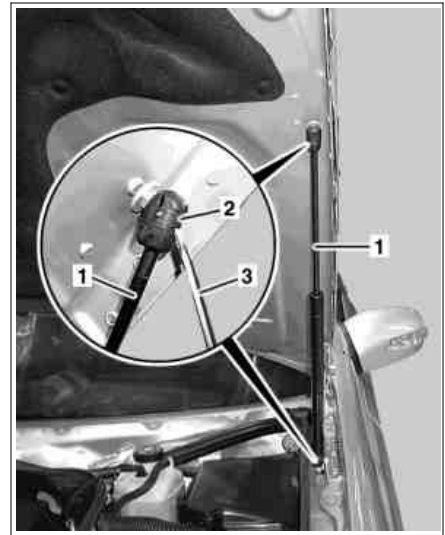

P88.40-2354-02

☒ ☒	Remove/Install		
1	Open engine hood and raise to vertical position		AR88.40-P-1000T
<p>⚠ Danger!</p> <p>2</p>	<p>Injury hazard Gas pressure struts are under high pressure and can pinch and crush body parts during work</p> <p>Lift retainers (2) at top and bottom with a screwdriver (3) and unclip the gas-operated strut (1) from the mounts.</p>	<p>Only remove and install gas-operated struts in the unstressed position and when the components are secured properly.</p> <p>⚠ Do not remove retainers (2), otherwise the preload will be lost.</p> <p>i Installation: Clip gas-operated strut (1) with installed retainers (2) on the mounts.</p>	AS00.00-Z-0012-01A
3	Install in the reverse order		