


P68.30-2480-09

## Shown on Model 211.0

- 1 Covering  
2 Bolt  
3 Edge guard

- 4 Air inlet vent (with code (581b)  
Comfort automatic air conditioning)  
5 Clip  
6 Clips

- 7 Seat belt  
8 B-pillar trim  
9 Mounting wedge  
10 Front door sill trim  
11 Rear door sill trim

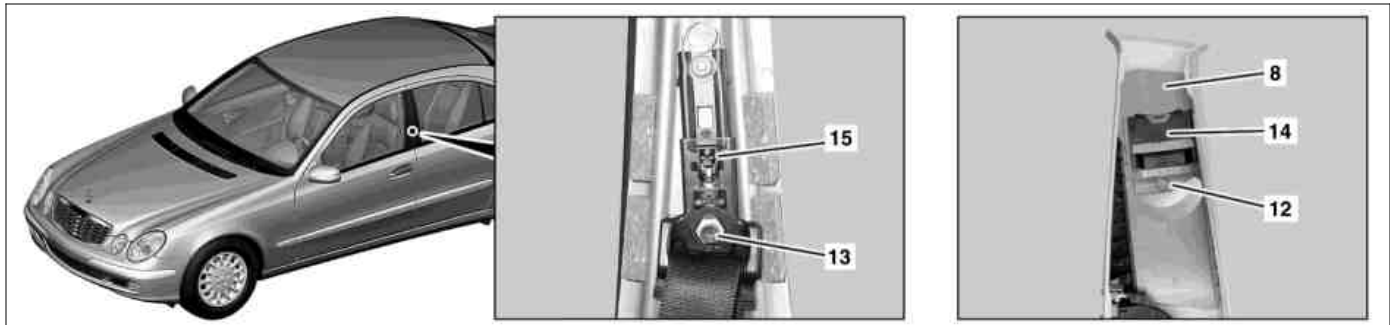

P68.30-2481-07

## Shown on Model 211.0

- 8 B-pillar trim  
12 Mount

- 13 Pin  
14 Button

- 15 Lock pawl

## Modification notes


25.7.03	Step added	Step 17	
---------	------------	---------	--

	Removal		
1	Move seat forward and raise rear of seat		
2	Remove cover (1) from front seat with mounting wedge (9)		*110589035900
3	Remove bolt (2) and remove belt end fitting		
4	Remove edge guard (3) in area of B-pillar trim (8) on both sides		
5.1	Remove air inlet vent (4) from B-pillar trim (8)		On vehicles with code (581b) Comfort automatic air conditioning
6	Remove front door sill trim (10) and rear door sill trim (11)		Lift out front door sill trim (10) and rear door sill trim (11) on B-pillar trim (8) side.
7	Press B-pillar trim (8) off of clips (5, 6) on B-		*110589035900

9	Remove clips (5) from B-pillar		*110589035900
10	Remove clips (6) from B-pillar trim (8)		
	<b>Installation</b>		
11	Insert clips (6) into B-pillar		
12	Insert clips (5) into B-pillar trim (8)		
13	Move seat belt (7) through B-pillar trim (8)		
14	Clip B-pillar trim (8) to B-pillar	Install mount (12) in bolts (13) and button (14) of lock pawl (15). Ensure that clips (5, 6) are seated properly.	
15	Check function of belt height adjustment on B-pillar	It should be possible to adjust and arrest the belt height adjustment.	
16	Install front door sill trim (10) and rear door sill trim (11)		
17.1	Install air inlet vent (4) in combination with B-pillar (8)	On vehicles with code (581b) Comfort automatic air conditioning	
18	Install edge guard (3) on both sides of B-pillar		
19	Insert belt end fitting and fasten with bolt (2) to front seat		*BA91.40-P-1001-01A
20	Install cover (1)		

**Seat belts/emergency tensioning retractors**

Number	Designation		Model 211
BA91.40-P-1001-01A	Bolt at belt end fitting	Nm	32

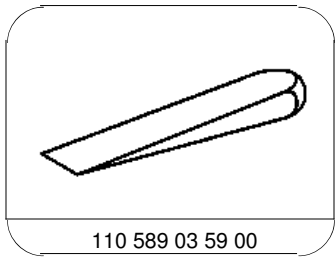

110 589 03 59 00

Mounting wedge