


MODEL 211.0

except CODE (287) Through-loading feature
 except CODE (924) Bivalent natural gas drive

Shown on paneling on left

- 1 Paneling
- 2 Screw
- 3 Anchoring lug
- 4 Expansion rivet
- 5 Frame
- 6 Center paneling

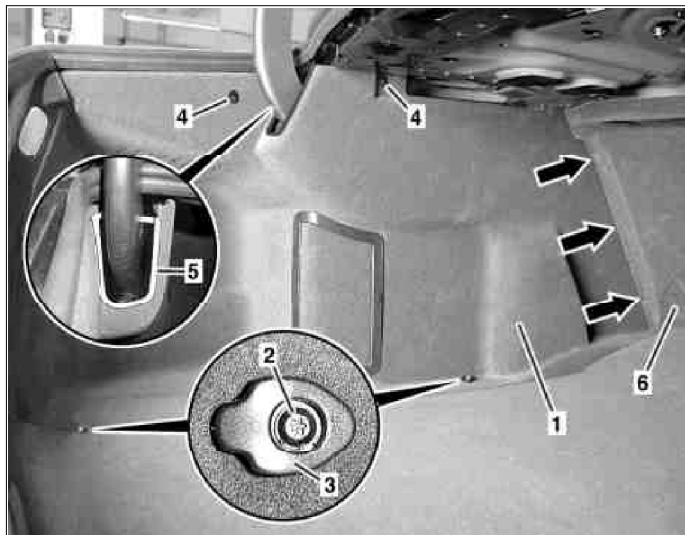

P68.30-2507-11

☒ ☒	Remove/Install		
1	Unscrew bolts (2) and remove anchoring lugs (3)	i Note correct installation positions.	
2	Remove expanding rivets (4)		
3	Remove frame (5)		
4	Fold paneling (1) out of center paneling (6) (arrows) and remove from trunk.	i Installation: Ensure that paneling (1) is seated correctly in relation to rear center section paneling.	
5	Install in the reverse order		

This document was created with Win2PDF available at <http://www.daneprairie.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.