

P68.30-2690-07

Shown on left C-pillar trim

1 Bolt
2 Belt end fitting


3 C-pillar trim
4 Seat belt

5 Edge guard

	Remove/Install		
1	Fold right rear seat cushion toward front	See operating instructions.	
2.1	Fold left rear seat cushion toward front	Only when removing left C-pillar trim (3). See operating instructions.	
3	Unscrew bolt (1) and remove belt end fitting (2)		*BA91.40-P-1012-01A
4	Fold right rear seat backrest toward front	See operating instructions.	
5.1	Fold left rear seat backrest toward front	Only when removing left C-pillar trim (3). See operating instructions.	
6	Loosen edge guard (5) in area of C-pillar trim (3)		
7	Loosen C-pillar trim (3) with mounting wedge		*110589035900
8	Remove C-pillar trim (3) and insert seatbelt (4)		
9	Install in the reverse order		

Seat belts/emergency tensioning retractors

Number	Designation	Model 211
BA91.40-P-1012-01A	Bolt, belt end fitting to vehicle floor	Nm 32

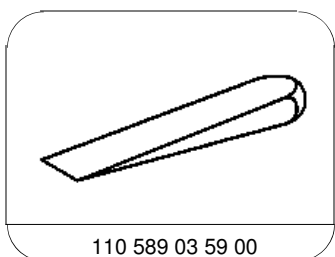

110 589 03 59 00

Mounting wedge