

MODEL 203.7, 211.0 with CODE (413) Panoramic sliding roof


MODEL 211.0

with CODE (413) Panoramic sliding roof



with CODE (419) Solar module for panoramic roof

Shown on model 211.0

- 1 Rubber bellows bracket
- 2 Rubber bellows
- 3 Guide rail
- 4 Rubber bellows rail
- 5 Front glass roof
- 6 Alignment pin

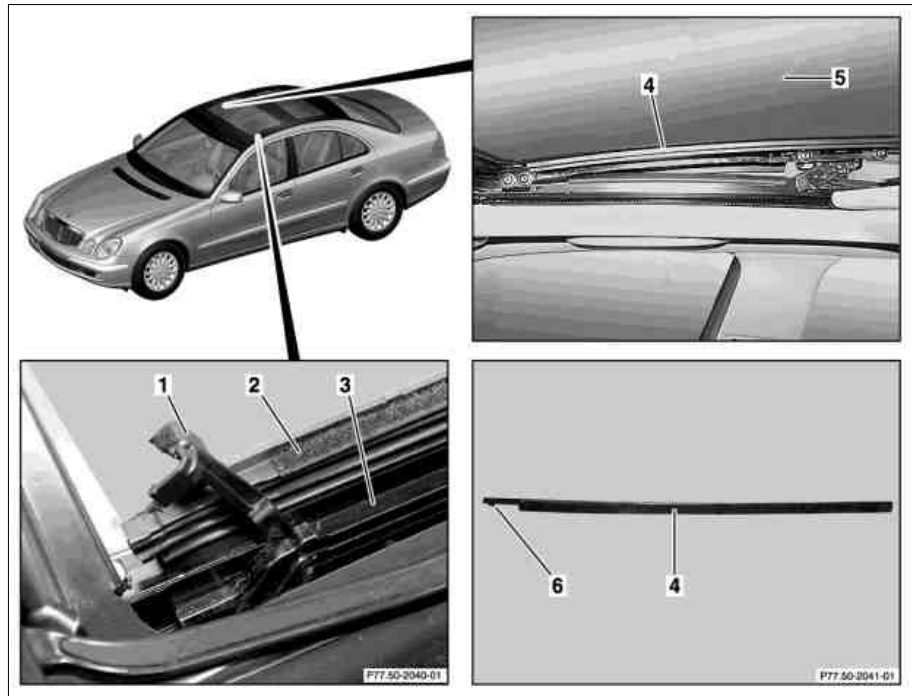

P77.21-2005-06

	Remove/install		
 <b>Danger!</b>	<b>Risk of injury</b> caused by <b>fingers being pinched or crushed</b> when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof.	Keep body parts and limbs well clear of moving parts.	<b>AS00.00-Z-0011-01A</b>
1	Completely open front glass roof (5).		
2	Unclip rubber bellows bearing (1) at front and pivot upward.		
3	Unclip rubber bellows bearing (1) at rear and remove.		
4	Unclip rubber bearing (2) from guide rail (3) starting at rear.		
5	Pull rubber bellows (2) out of rubber bellows rail (4) and remove.		
6	Move front glass roof (5) to pop-up position		
7	Unclip rubber bellows rail (4) from front glass roof (5), starting at rear, and remove.	 <b>Installation:</b> Guide pin (6) should catch audibly.	
8	Install in the reverse order		