


MODEL 211.0 /2 /6


Footwell paneling

Shown on paneling on left





- 1 Paneling
- 2 Edge guard
- 3 Door sill molding
- 4  Mounting wedge
- 5 Electrical connector
(with code (383b) CP High telephone system)


H4/9 Left front speaker
(with code (383b) CP High telephone system)

H4/10 Right front speaker
(with code (383b) CP High telephone system)

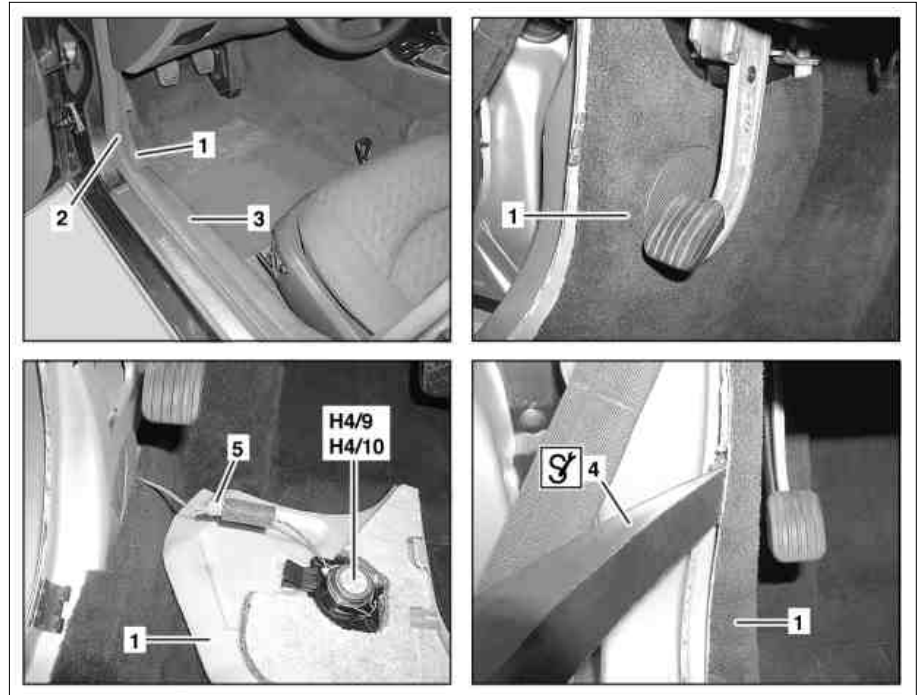

P68.30-2504-06

	Remove/Install		
1	Remove edge guard (2) in area of paneling (1)		
2	Unclip door sill molding (3) with mounting wedge (4)	 Only unclip front piece.	
3	Unclip paneling (1) from A-pillar toward rear with mounting wedge (4)		*110589035900
4.1	Disconnect electrical connector (5) from left front speaker (H4/9) or right front speaker (H4/10)		*110589035900
5	Remove paneling (1)		
6	Install in the reverse order		

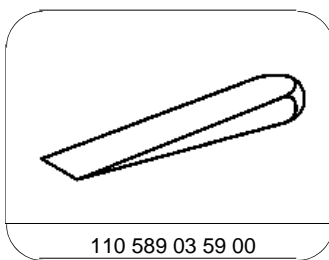

110 589 03 59 00

Mounting wedge