


P88.20-2555-09

Shown on model 211.2

- 1 PTS wiring harness (with code (220) Parktronic system (PTS))
- 2 Nut
- 3 Bolts
- 17 Hazard warning triangle

- 18 Bolt (present if equipped)
- 19 Control unit bracket (present if equipped)


- M40/1 Pneumatic pump for dynamic seat control (with code (433) Left dynamic seat including multicontour seat)

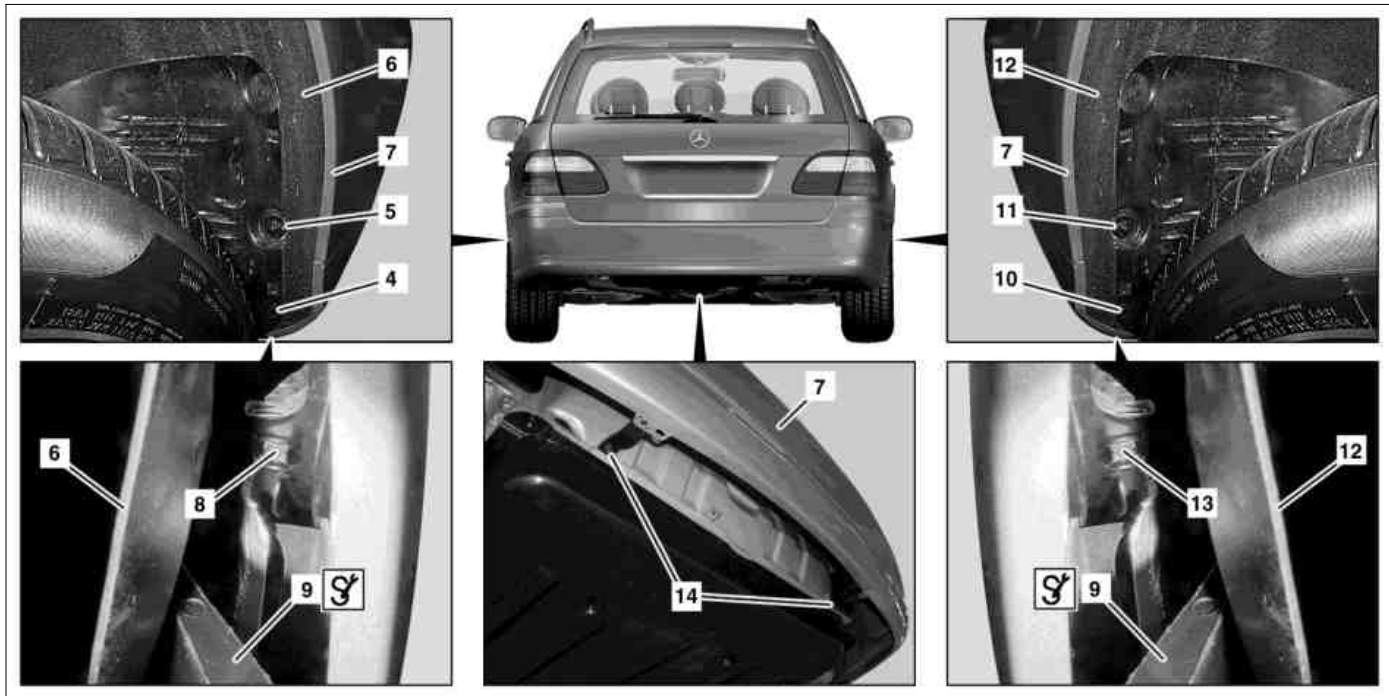

P88.20-2437-09


Shown on model 211.2

- 4 Plug clip
- 5 Nut
- 6 Left fender liner
- 7 Bumper

- 8 Bolt
- 9  Mounting wedge
- 10 Plug clip
- 11 Nut

- 12 Right fender liner
- 13 Bolt
- 14 Bolts

- 7 Bumper
- 15 Guides
- 16 Bracket

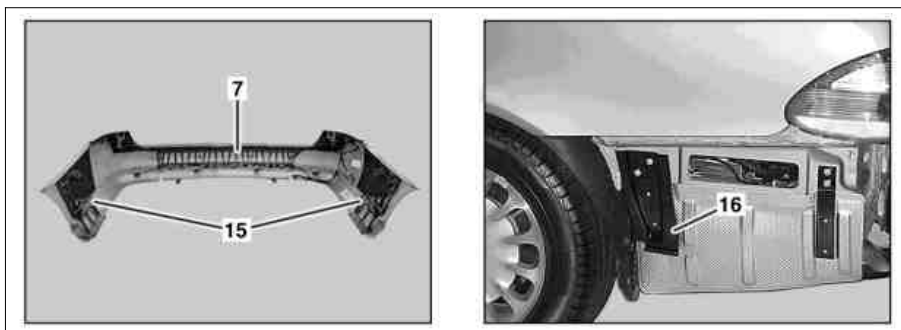


P88.20-2436-04

Modification notes

11.11.03	"Disconnect/connect battery ground line" removed		
----------	--	--	--

☒ ☒	Remove/install		
1.1	Remove left and right loads compartment inner paneling	Model 211.2	AR68.30-P-1180T
1.2	Remove present panelings in left and right side of load compartment until nuts (2) on left and right are accessible.	Model 211.6 i The presence or execution of paneling depends on the vehicle equipment.	
2.1	Remove bass module speaker	On model 211.2 with code (810) Sound system.	AR82.62-P-7839T
3.1	Remove hazard warning triangle (17) from bracket and lay down to side	On vehicles with code (404) Left multicontour seat or with code (433) Left dynamic seat including multicontour seat	
4.1	Remove pneumatic pump for dynamic seat control (M40/1) or multicontour seat pneumatic pump with bracket and lay down to side with lines connected.	On vehicles with code (404) Left multicontour seat or with code (433) Left dynamic seat including multicontour seat	
5.1	Expose PTS wiring harness (1) and disconnect PTS connector, rear bumper.	On vehicles with code (220) Parktronic system (PTS).	
6	Unscrew left and right nuts (2)		
7.1	Unscrew bolt (18) from bracket control module (19) and pivot bracket control module (19) toward front	Only if fitted.	
8	Unscrew bolts (3) on left and right		
9	Remove clip (4) and unscrew nut (5)		
10	Loosen left fender liner (6) from bumper (7) with assembly wedge (9) until bolt (8) is accessible.	☒	*110589035900
11	Unscrew bolt (8)		
12	Remove plug clip (10) and unscrew nut (11)		
13	Loosen right fender liner (12) from bumper (7) with assembly wedge (9) until bolt (13) is accessible.	☒	*110589035900
14	Remove bolt (13)		
15	Remove bolts (14)		
16	Remove bumper (7)	i Installation: Ensure that guides (15) are seated correctly on rear bumper (7) in brackets (16) on left and right on body.	
17.1	Guide PTS wiring harness (1) through opening into body.	On vehicles with code (220) Parktronic system (PTS). i Installation: Ensure that sealing element is seated properly.	
18	Install in the reverse order		

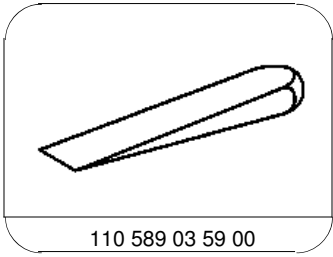

110 589 03 59 00

Assembly wedge