


MODEL 211.0/ 2/ 6

Shown with code (889) Keyless go

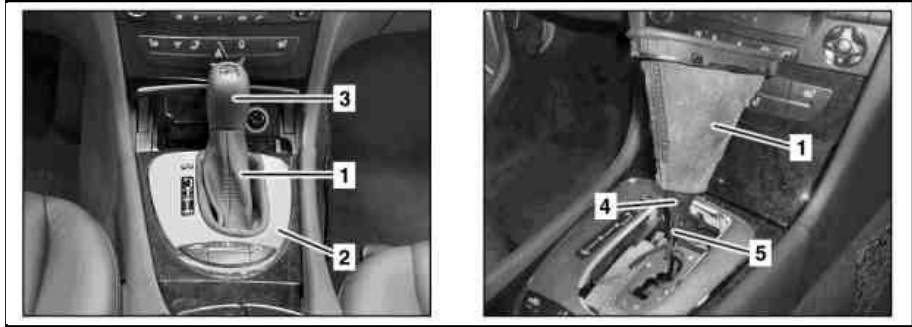

- 1 Shift lever boot
- 2 Center console cover
- 3 Shift lever knob
- 4 Shift knob lock
- 5 Gearshift lever




P68.20-2609-04

**Modification notes**

5.7.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

	Remove/install		
1	Unclip shift lever boot (1) from center console cover (2) with long wedge 		*115589035900
2	Pull shift lever boot (1) over shift knob (3)		
3	Release shift knob lock (4) by turning clockwise		
4	Remove shift knob (3) from shift lever (5) together with shift lever boot (1)		
5	Install in the reverse order		

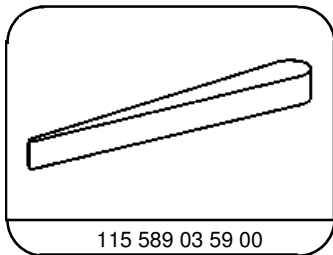

115 589 03 59 00

Long wedge