



MODEL 211
with CODE (494) USA version
as of Model Year 2006

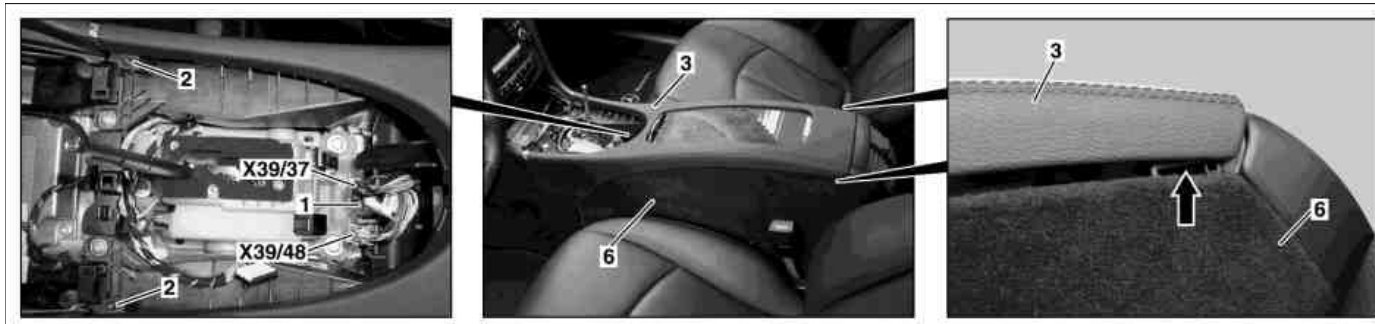

P68.20-3810-07


- 1 Plug connection
- 2 Bolts
- 3 Center console upper section
- 6 Center console lower section
- 4 Plug connections
- 5 Bracket
- 6 Center console lower section
- 7 Bolts

- X39/37 CTEL separation point
- X39/48 Breakdown assistance/info button plug distributor

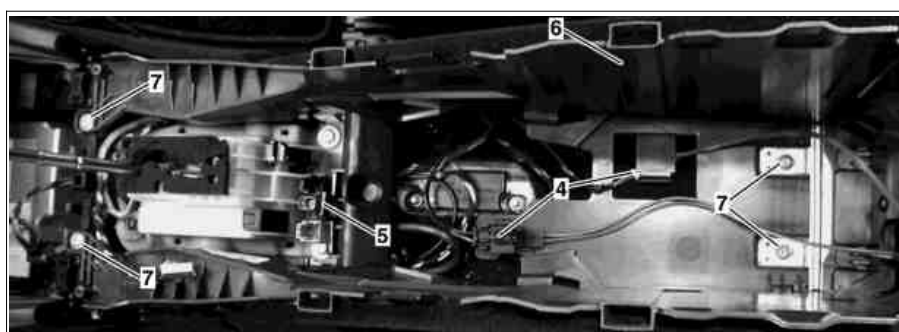

P68.20-3811-04

☒ ☒	Remove/install		
1	Remove cover on center console		AR68.20-P-2350T
2	Remove ashtray from front center console	i Installation: Check ashtray housing mechanism for proper function, if necessary loosen threaded connection of center console bottom section (6) and tighten center console bottom section (6) without tension.	AR68.20-P-2400T
3	Disconnect connectors (1) (X39/37, X39/48)		
4	Remove bolt (2)		
5	Carefully unclip center console upper section (3) upward.	⚠ Risk of fracturing! i Press in long wedge directly at clips (arrow). ☒	*115589035900
6	Disconnect connectors (4)		
7	Remove brackets (5) for connectors from center console lower section (6)		
8	Remove bolts (7)	i Installation: Ensure that center console bottom section (6) is installed without tension.	
9	Remove center console lower section (6) upward		
10	Install in the reverse order		

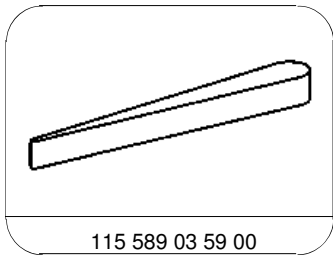

115 589 03 59 00

Long wedge