


P72.12-2771-09

- 1 Door lining
- 2 Cover
- 3 Cover
- 4 Screw

- 5 Door lock cover
- 6 Screw
- 7 Clip
- 8 Bowden cable

- 9 Electrical connectors
- 10 Electrical connectors
- 11 Cover

	Remove/install		
1.1	Remove ashtray in rear door	Vehicle with code 301 Ashtray/smoker package	AR72.12-P-1041T
1.2	Install assembly wedge from front behind cover (11), unclip cover (11) and remove	Vehicle without code 301 Ashtray package/smoker package 	*110589035900
2	Unclip cover (2) from door lining (1) and remove bolt underneath		
3	Unclip cover (3) with assembly wedge and remove bolts underneath	Two bolts are located below the cover (3). 	*110589035900
4	Remove screw (4) and take off door lock cover (5)		
5	Remove bolt (6)		
6	Unclip door lining (1) from clips (7) on rear door with assembly wedge	Position assembly wedge directly next to clips (7). Installation: Replace damaged clips (7).	*110589035900
7	Unhinge Bowden cable (8)		
8	Separate electrical connectors (9, 10) and remove door lining (1)		
9	Install in the reverse order		

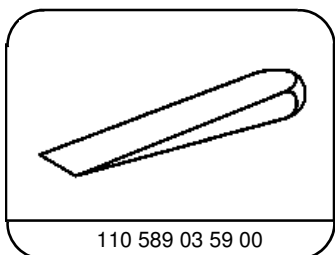

110 589 03 59 00

Mounting wedge