

AR33.20-P-0500-06VM	Loosen front shock-absorber strut at transverse control arm and secure		
---------------------	--	--	--

Nm Struts


Number	Designation		Model 211.08/ 09/28/29
BA32.25-P-1012-04B	Nut of shock-absorber strut to transverse control arm	Nm	162

Removing

- 1 Unscrew nut (02) and bolt (01) at front shock-absorber strut and bottom of transverse control arm.

Install

- 2 Mount bolt (01) and nut (02) on front shock-absorber strut and bottom transverse control arm **Nm**
i The bolt (01) must be inserted from the front end of the vehicle towards the back.

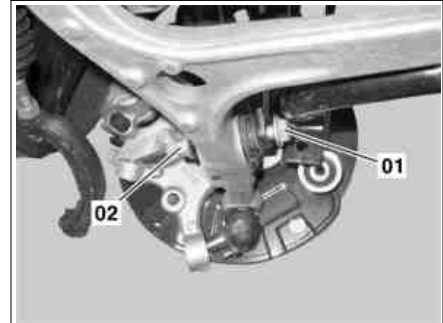

P33.20-2086-01