
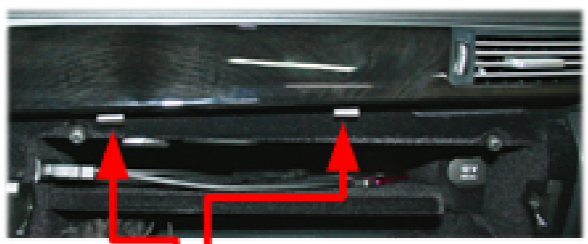



W212 VIM

Enables video in motion for factory DVD playback on 2010 and up E-Class


What's in the box	
<ul style="list-style-type: none">• Video in Motion (VIM) filter• T-Harness	

Installation	
<ol style="list-style-type: none">1. Open the glove compartment to gain access to (2) metal retention clips located just behind the wood trim. Using a right angle pick tool, gently pull down the retention clips to release the locks on the back side of the wood grain trim.2. Using a plastic pry tool, gently put pressure on the back side of the trim. DO NOT PRY OFF! With pressure applied, look inside the 2 center AC vents. On either side will be a plastic retention clip. Using a right angle pick tool, carefully reach into the vents to pull back each clip on either side to release the wood trim. Once released, remove from vehicle.3. The radio is held in by (2) T20 Torx bolts	 <p>Retention Clips</p>  <p>Retention Clips</p>

that are located on the top of the radio. Using an angled skew driver, loosen the screws all the way to release the radio.

***NOTE** – The screws will not pull out, they move a bar down on the backside of the radio to release the radio from the dash.

4. Remove the radio from the dash.
5. Install provided harness and filter. Be sure to plug in USB cable and run it to an accessible location for future updates.
6. Reinstall in reverse order.

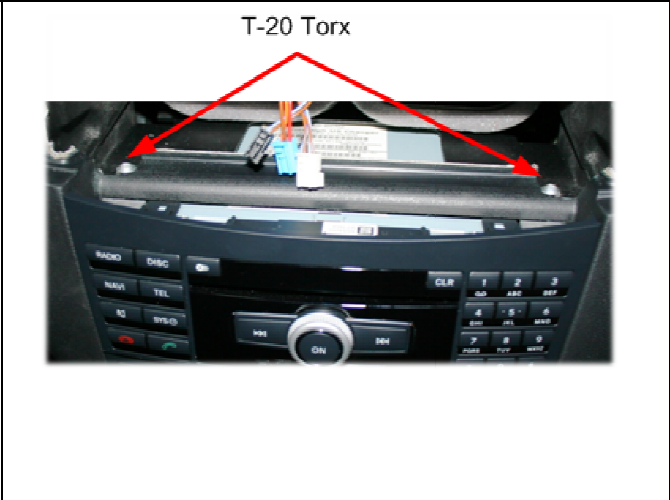

Operation	
<p>Before installation the Dip switch settings should be checked and set as follows:</p> <p>Dip 1: ON, Dip 2: OFF, Dip 3: OFF</p> <p>The TV-free function is always active, without hurting the navigation performance</p>	