


MODEL 204, 207, 212, 216, 221

Shown on driver side on model 204 up to model year 2011


- 1 Mirror triangle paneling
- 2 Cover
- 3 Door lining
- 4 Electrical connectors
- 5 Bolts
- 6 Electrical line
- 7 Omega clip

M21/1 Left outside mirror
M21/2 Right outside mirror

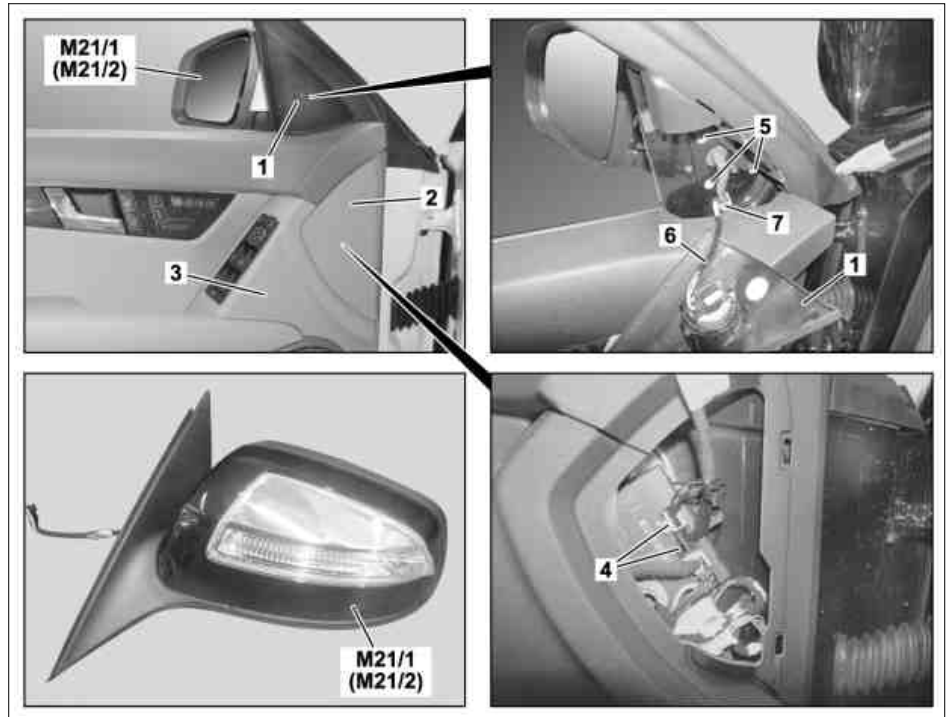

P88.70-2482-06

☒ ☒	Remove/install		
1	Unclip left and right mirror triangle paneling (1) and allow electrical line (6) to hang down	☑ Mounting wedge	*110589035900
2	Remove rear soundproofing from cover on mirror triangle (1)	In model 204, 216, 221	
3	Unclip window frame paneling in area of threaded connection on left outside mirror (M21/1) or right outside mirror (M21/2)	On model 204.9	
4	Unclip cover (2) from door lining (3) and remove	☑ Mounting wedge	*110589035900
5	Disconnect electrical connectors (4)		
6	Remove omega clip (7)	On model 204, 212	
7	Protection door lining (3) in area of bolts (5) against damage with adhesive tape	In case of model 207	
8	Remove bolts (5) and remove left outside mirror (M21/1) or right outside mirror (M21/2)	ⓘ Prevent screws (5) from falling.	
9	Install in the reverse order		

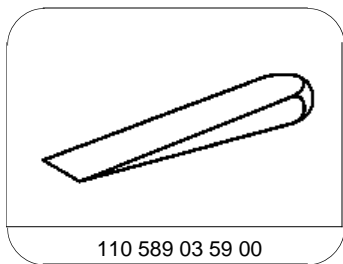


110 589 03 59 00

Mounting wedge

- MODEL 117, 156, 176, 204.3/9, 212, 218, 242, 246
- MODEL 204.0##/2## #A as of 213187
- MODEL 204.0##/2## #F as of 231783
- MODEL 204.0##/2## #R as of 048423
- MODEL 207.### ## as of 032555
- MODEL 216 as of 6/1/09
- MODEL 221 as of 6/1/09

Illustrated on model 204.9

- 1 Upper trim panel
- 2 Lower trim panel
- 3 Screw

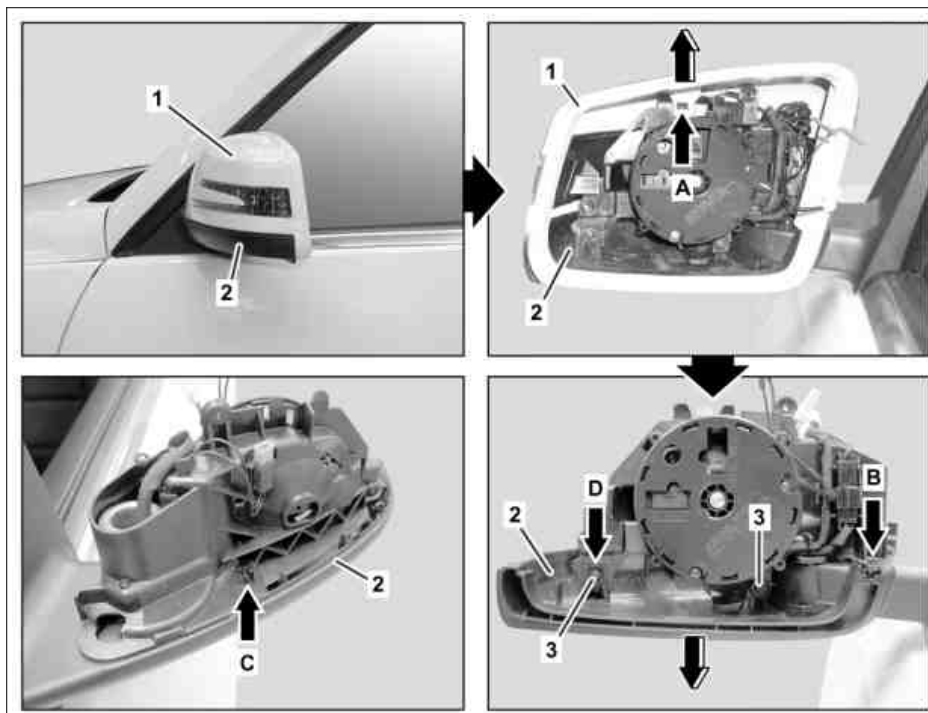


P88.70-2548-06

☒ ☒	Remove/install		
1	Remove mirror glass on left and right outside mirror	MODEL 117, 156, 176, 242, 246 MODEL 216 MODEL 221 MODEL 204.0##/2## #A as of 213187 MODEL 204.0##/2## #F as of 231783 MODEL 204.0##/2## #R as of 048423 MODEL 204.3/9, 212, 218 MODEL 207.### ## as of 032555	AR88.70-P-9020NKB AR88.70-P-9020TX AR88.70-P-9020CW
2	Lift catch hook (arrow) and remove upper paneling (1) upward in direction of arrow		
3	Remove screws/bolts (3)		
4	Unlock catch hook (arrow B)		
5	Unlock catch hook (arrow C) and retaining bracket (arrow D) and remove lower paneling (2) downward in direction of arrow	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> i Pull outside rearview mirror ambient lamp, integrated into lower cover (2), out of socket before removing lower cover (2). </div>	
6	Install in the reverse order		

MODEL 203.7## #E
with CODE 809(Model year 2009)
MODEL 166, 204, 207, 212, 218
MODEL 164, 251
as of model year 2011

Shown on model 204 with code (249)
Automatically dimming inside and outside
mirrors including folding outside mirrors

- 1 Mirror glass
2 Catch hook
3 Electrical connectors
4 Electrical connector
M21/1 Left outside mirror
M21/2 Right outside mirror

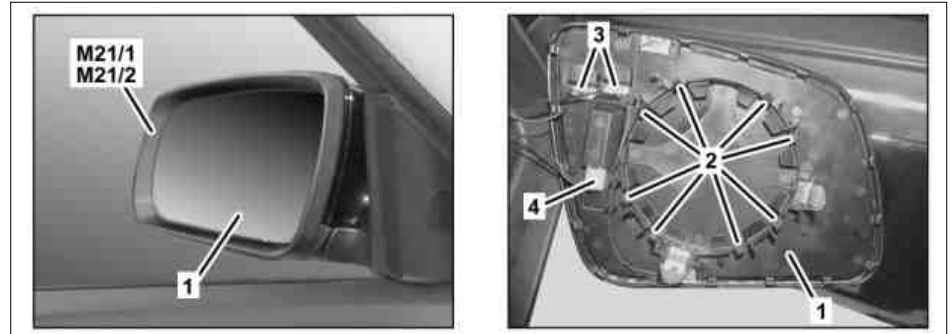

P88.70-2538-04

☒ ☒	Remove/install		
⚠ Danger !	Risk of injury caused by irritation of the skin, eyes and respiratory system through contact or inhalation of substances contained in the mirror lens.	Wear protective gloves and safety glasses.	AS60.00-Z-0008-01R
1	Tilt out mirror lens (1) upward		
2	Manually pull mirror glass (1) toward rear and unclip from left outside mirror (M21/1) or right outside mirror (M21/2)	<p>⚠ When unclipping, ensure that mirror glass (1) and the catch hooks (2) are not damaged. Otherwise it is necessary to replace the mirror glass (1).</p> <p>i Installation: Clip mirror glass (1) from bottom upward into left outside mirror (M21/1) or right outside mirror (M21/2). Ensure that all catch hooks (2) arrest completely.</p>	
3	Disconnect electrical connectors (3, 4) and remove mirror glass (1)	<p>⚠ When installing ensure that electrical wiring harnesses are routed without pinching. Otherwise the electrical wiring harnesses can be damaged.</p> <p>i The number of electrical connectors (3, 4) depends on the vehicle equipment.</p>	
4	Install in the reverse order		