









P82.10-5926-09

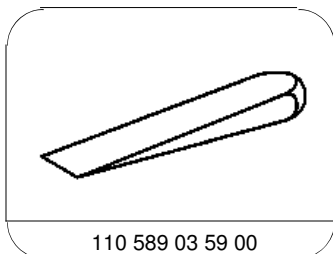
Shown on model 212.0

- 1 Cover
- 2 Rear shelf
- 3 Clips

E21 Center stop lamp

E21x1 Center brake lamp electrical connector

 	Remove/install			
1	Unclip catch hooks (arrows A) of cover (1) from one side to the other using assembly wedge		Mounting wedge	*110589035900
2	Press down rear shelf (2) at left and right next to cover (1) until left and right catch hook (arrow C) can be unclipped from rear shelf (2)		Press rear shelf (2) down carefully, risk of breakage. Do not damage rear window heater when pressing down rear shelf (2).	
3	Unclip left and right catch hook (arrows C) of cover (1) from rear shelf (2) using assembly wedge		Mounting wedge	*110589035900
4	Unclip catch hook (arrows B) of cover (1) from rear shelf (2) using assembly wedge		Mounting wedge	*110589035900
5	Lift cover (1) and disconnect center brake lamp electrical connector (E21x1)		When lifting cover (1), ensure that rear window heater is not damaged.	
6	Remove cover (1) with center brake lamp (E21) from rear shelf (2)		Installation: Ensure that electrical wiring harness is routed correctly in rear shelf (2).	
7	Unclip clips (3) from cover (1)			
8	Remove center brake lamp (E21) from cover (1)			
9	Install in the reverse order			



110 589 03 59 00

Mounting wedge