

P68.30-3438-07

Shown on model 212.0


- 1 Spare tire cover
- 2 Frame seal

- 3 Spare wheel well paneling (without code (669) Spare wheel well on steel rim or without code (690) Emergency spare tire)

- 4 Nuts
- 5 Rear center section paneling
- 6 Clips


Type 218.3

- 5 Rear center section paneling
- 7 Clips

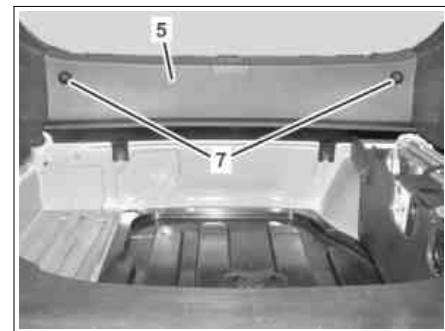


P68.30-3553-01

☒ ☒	Remove/install		
1	Open trunk lid		
2	Lift spare wheel cover (1) and hook into sealing frame (2)		
3	Unclip clips (7)	Type 218.3 ☒ Clip remover	*452589016300
4	Lift spare wheel well paneling (3) to side until nuts (4) are accessible	On vehicles without code (669) Spare tire on steel rim or without code (690) Emergency spare tire	
5	Loosen nuts (4), unclip rear center section paneling (5) from clips (6) with assembly wedge and remove upward	ⓘ Only slacken nuts (4), do not unscrew completely. ☒ Mounting wedge	*110589035900
6	Install in the reverse order		

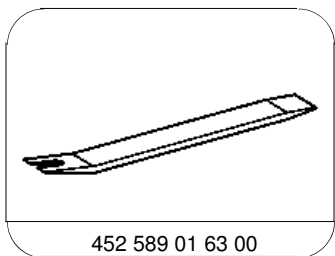

452 589 01 63 00

Snap-release tool

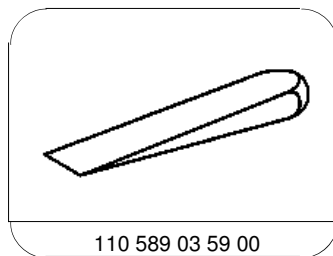

110 589 03 59 00

Mounting wedge