


MODEL 212.2

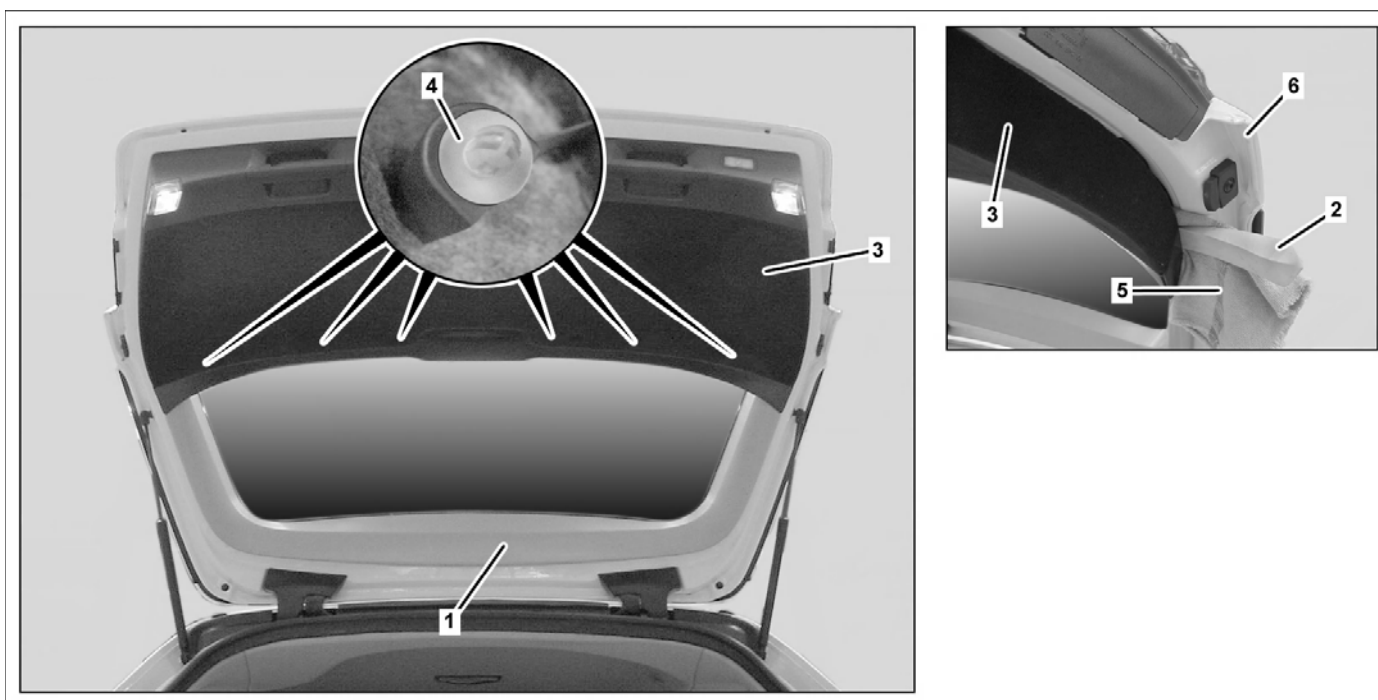


P72.20-2975-09

- 1 Window frame paneling
- 2 Assembly wedge

- 3 Center trim
- 4 Clips

- 5 Rag
- 6 Rear-end door


- 1 Window frame paneling
- 7 Clip
- 8 Clip
- 9 Clip
- 10 Clip
- 11 Clips

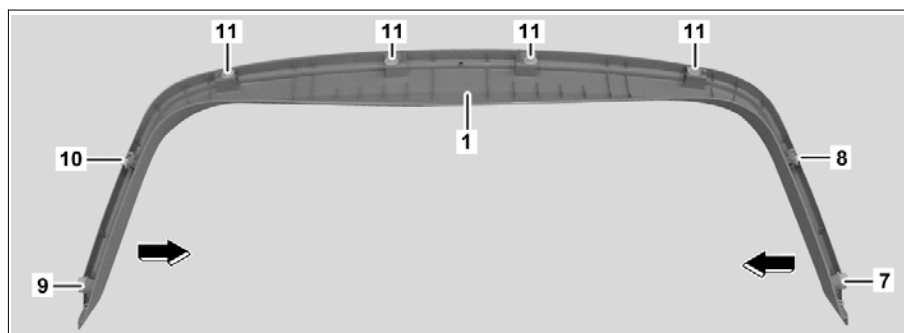

P72.20-2976-04

<p>⚠ Danger!</p>	<p>Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.</p>	<p>No parts of the body or limbs should be within the operating area when the components are moving.</p>	<p>AS00.00-Z-0011-01A</p>
<p>i</p>	<p>Notes on sensor system for trunk lid opening/closing</p>		<p>AH80.61-P-0001-01A</p>
<p>⊠ ⊠</p>	<p>Remove/install</p>		
<p>1</p>	<p>Unclip center paneling (3) from rear-end door (6) with assembly wedge (2)</p>	<p>ⓘ Lay rag (5) over assembly wedge (2). Otherwise the paint on the rear-end door (6) can be damaged. i Installation: Ensure that clips (4) are seated correctly in center paneling (3). ☑ Mounting wedge</p>	<p>*110589035900</p>

2	Unclip clip (7) with window frame paneling (1) from window frame in direction of arrow	⚠️ Maintain sequence for unclipping window frame paneling (1). Otherwise the mounting elements of the window frame paneling (1) can be damaged. ☑️ Mounting wedge	*110589035900
3	Unclip clip (8) with window frame paneling (1) from window frame in direction of arrow	☑️ Mounting wedge	*110589035900
4	Unclip clip (9) with window frame paneling (1) from window frame in direction of arrow	☑️ Mounting wedge	*110589035900
5	Unclip clip (10) with window frame paneling (1) from window frame in direction of arrow	☑️ Mounting wedge	*110589035900
6	Unclip clips (11) with window frame paneling (1) from window frame and remove	☑️ Mounting wedge	*110589035900
7	Install in the reverse order	⚠️ Installation: Always maintain sequence for clipping in window frame paneling (1). Otherwise the mounting elements of the window frame paneling (1) can be damaged.	

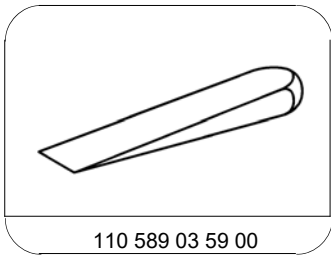

110 589 03 59 00

Mounting wedge