


MODEL 212.2

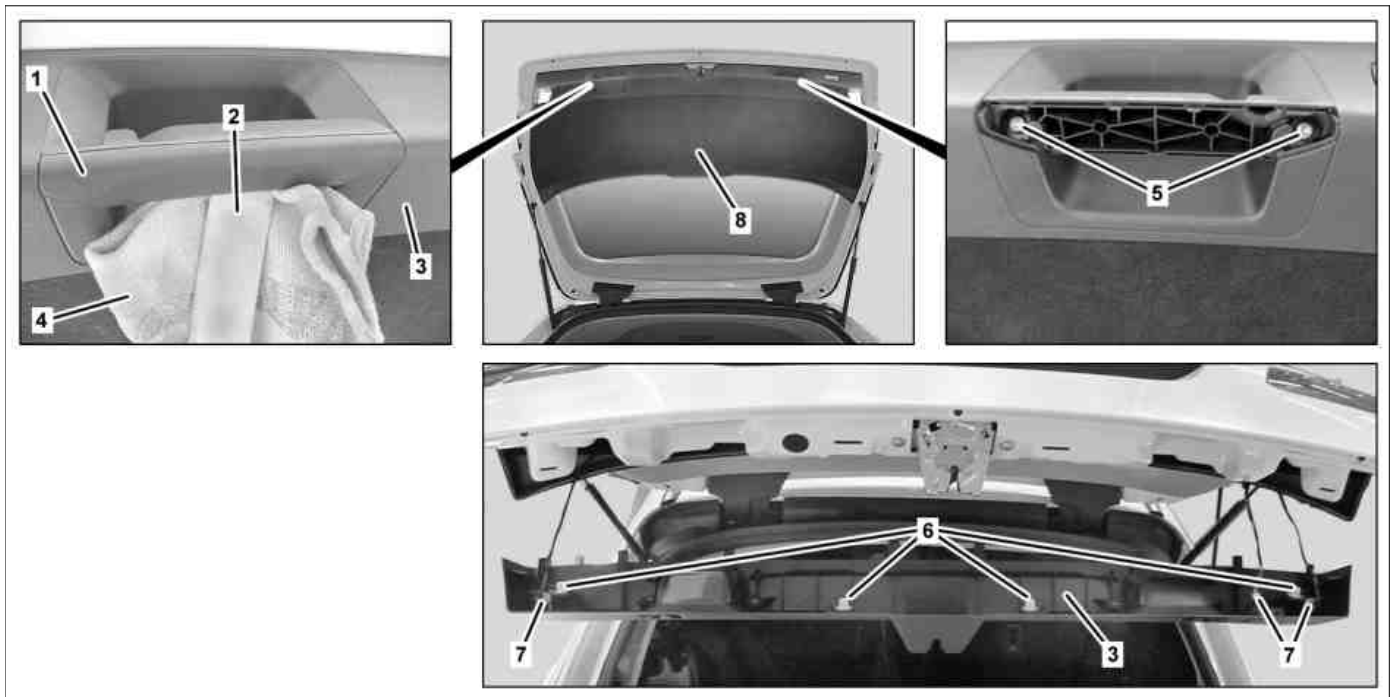


P72.20-2977-09

- 1 Cover
- 2 Assembly wedge
- 3 Lower door lining

- 4 Rag
- 5 Bolts
- 6 Clips

- 7 Electrical connectors
- 8 Center door lining

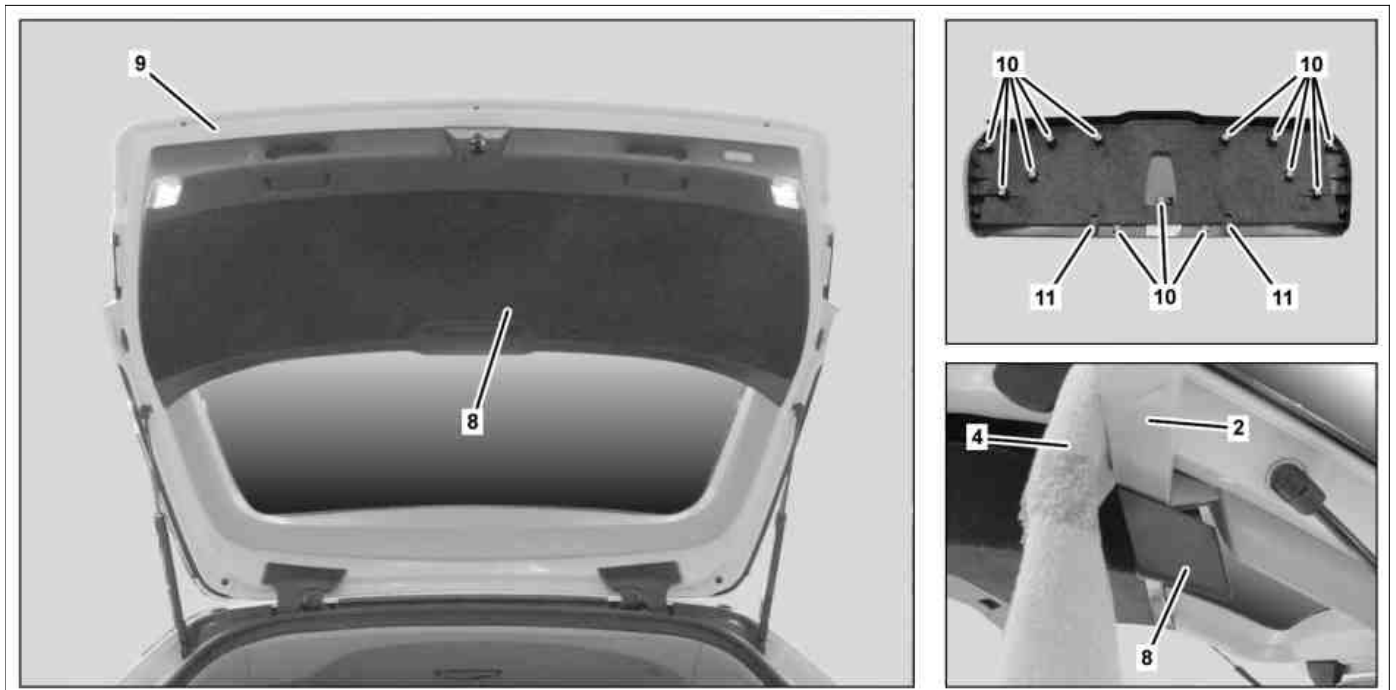


P72.20-2978-09

- 2 Assembly wedge

- 8 Center door lining

- 10 Clips

<b>⚠ Danger !</b>	<b>Risk of injury</b> caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
<b>i</b>	Notes on sensor system for trunk lid opening/closing		AH80.61-P-0001-01A
<b>↔ ↔</b>	<b>Remove/install</b>		
1	Unclip covers (1) at front from lower door lining (3) using assembly wedge (2).	<p><b>⚠</b> Tap against assembly wedge (2) to loosen covers; do not unclip covers (1) by twisting assembly wedge (2). Place rag (4) over assembly wedge (2) to protect lower door lining (3). Otherwise the covers (1) and the lower door lining (3) can be damaged.</p> <p><b>🔧</b> Mounting wedge</p>	*110589035900
2	Remove bolts (5)		
3	Unclip bottom door lining (3) from clips (6) and remove until electrical connectors (7) are accessible		
4	Disconnect electrical connectors (7)	<b>i</b> If only the center door lining (8) is removed, allow lower door lining (3) to hang down with electrical lines connected.	
5	Loosen center door lining (8) from window frame on rear-end door (9) with assembly wedge (2)	<p><b>i</b> Only loosen door lining on window frame from rear-end door (9).</p> <p><b>🔧</b> Mounting wedge</p>	*110589035900
6	Unclip clips (10) from center door lining (8) on rear-end door (9)	<b>🔧</b> Mounting wedge	*110589035900
7	Unhook center door lining (8) from shackles (11)	<b>i Installation:</b> Hook center door lining (8) first into both shackles (11).	
8	Install in the reverse order		

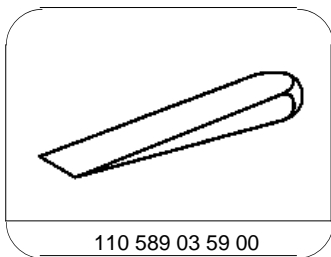

110 589 03 59 00

Mounting wedge