


**MODEL** 212.0## (except 212.007/074/075/076/092/093/094/095) 1# up to 4/12/13, 212.2## (except 212.207/274/275/276/292/298) 1# up to 4/12/13 up to model year 2014

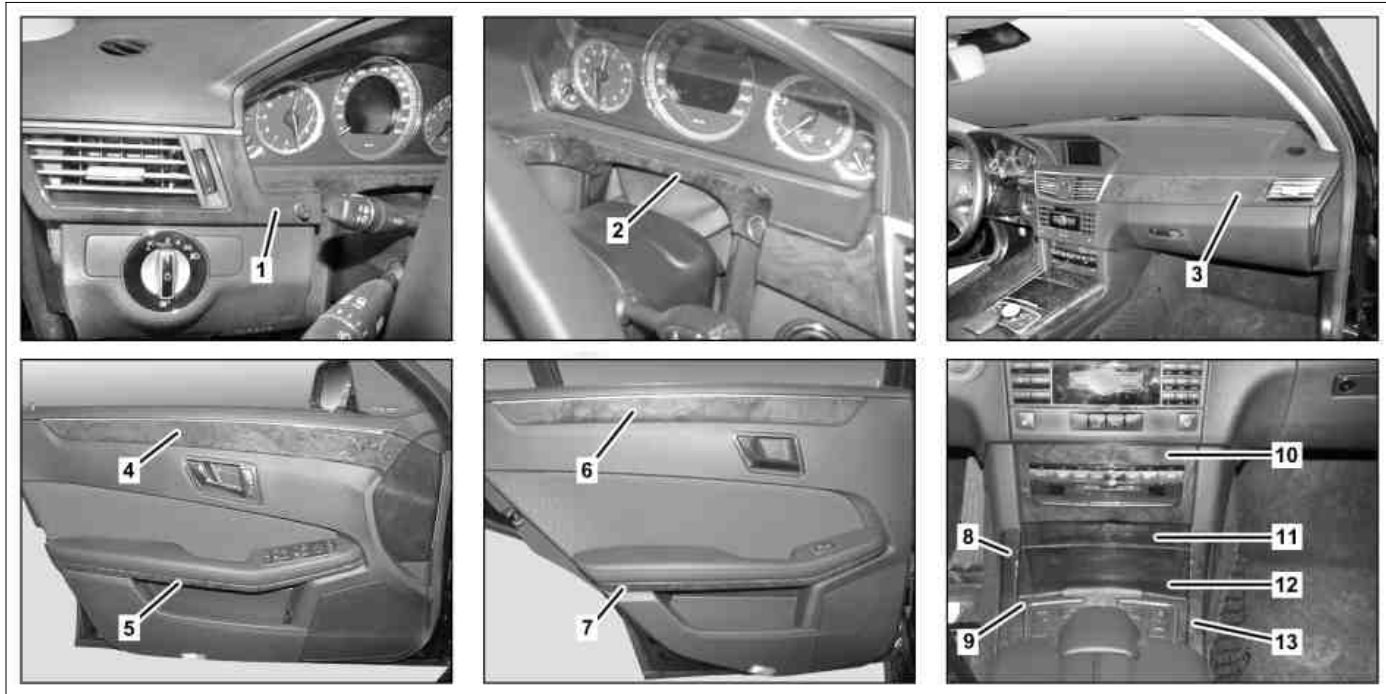


P68.30-3476-09

**Shown on vehicle with CODE 279 (Electronic gear selector)**

- |   |                           |    |                                   |    |                                  |
|---|---------------------------|----|-----------------------------------|----|----------------------------------|
| 1 | Trim (left air vent)      | 6  | Trim (upper front door)           | 11 | Trim (front stowage compartment) |
| 2 | Trim (instrument cluster) | 7  | Trim (lower rear door)            | 12 | Trim (rear stowage compartment)  |
| 3 | Trim (passenger side)     | 8  | Trim (left center console)        | 13 | Trim (right center console)      |
| 4 | Trim (upper front door)   | 9  | Trim (middle center console)      |    |                                  |
| 5 | Trim (lower front door)   | 10 | Trim (control and operating unit) |    |                                  |

	Information on preventing damage to electronic components due to electrostatic discharge		<a href="#">AH54.00-P-0001-01A</a>
	<b>Remove</b>		
1 AR	Remove front door liner		<a href="#">AR72.10-P-1000CW</a>
2 AR	Remove rear door lining		<a href="#">AR72.12-P-1010CW</a>
3 AR	Remove automatic air conditioning control and operating unit		<a href="#">AR83.40-P-6350EW</a>
4 AR	Remove trim strip on dashboard		<a href="#">AR68.10-P-1180EW</a>
	<b>Install</b>		
5	Retrofit trim parts (4, 5, 6 and 7) on doors	Mounting wedge	<a href="#">AN68.30-P-0004-01EW</a> <a href="#">*110589035900</a>
6	Retrofit trim parts (8, 9, 10, 11, 12 and 13) on center console	Mounting wedge	<a href="#">AN68.30-P-0004-02EW</a> <a href="#">*110589035900</a>
7	Retrofit trim parts (1, 2 and 3) on instrument panel		<a href="#">AN68.30-P-0004-03EW</a>
8	Install remaining parts		
9	Clean installed trim parts (1 to 13)	Use cleaning agent approved by Daimler AG.	

10	Enter special equipment in online vehicle data card via vehicle documentation system (VeDoc)	<b>i Add:</b> - CODE 731 (trim parts burred walnut veneer wood finish ) - CODE 736 (wood finish ash black) - CODE H09 (trim parts wood finish ash brown) - CODE H76 (trim parts aluminum brushed) <b>Delete:</b> - CODE with removed trim parts	
11	Document retrofitted equipment in VeDoc	<b>i</b> Attach "Trim parts retrofitted according to AN68.30-P-0004EW" note under the field organization texts to KG68.	

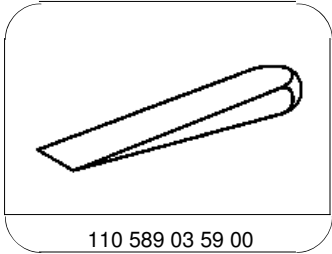

110 589 03 59 00

Mounting wedge

**Parts ordering note**

Part no.	Designation	Quantity
KG 99 (siehe EPC)	Scope of delivery for trim parts	1