


MODEL 204, 207, 212, 216, 221

Shown on model 204 up to model year 2011


- 1 Mirror triangle paneling
- 2 Cover
- 3 Door lining
- 4 Electrical connections
- 5 Bolts
- 6 Electrical line
- 7 Omega clip
- M21/1 Left outside mirror
- M21/2 Right outside mirror

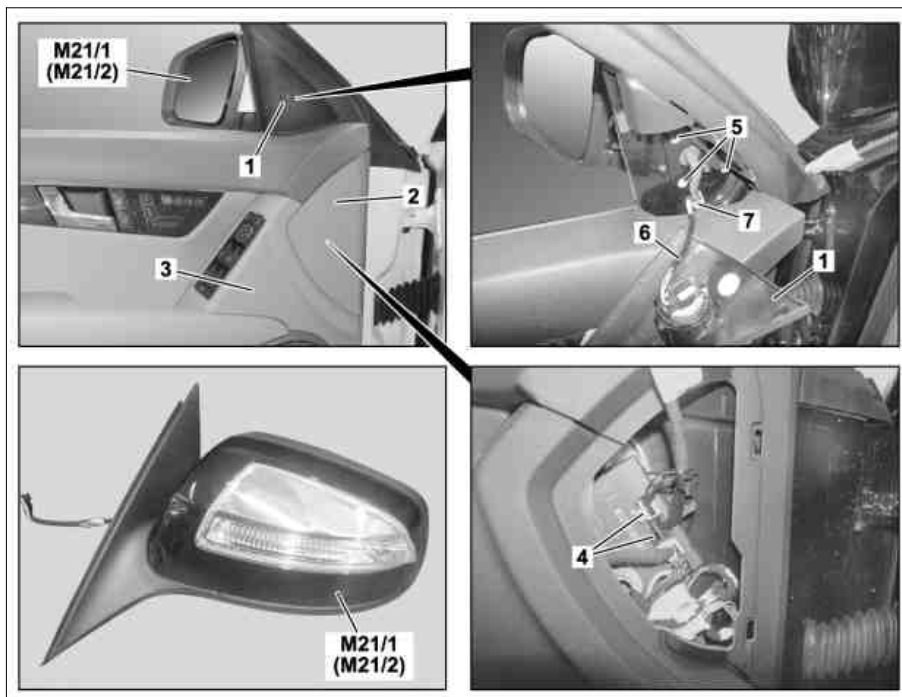

P88.70-2482-06

Shown on model 212 as of model year 2014

- 1 Mirror triangle paneling
- 2 Cover
- 4 Electrical connections
- 5 Bolts
- 7 Omega clip
- 8 Electrical connector
- M21/1 Left outside mirror
- M21/2 Right outside mirror

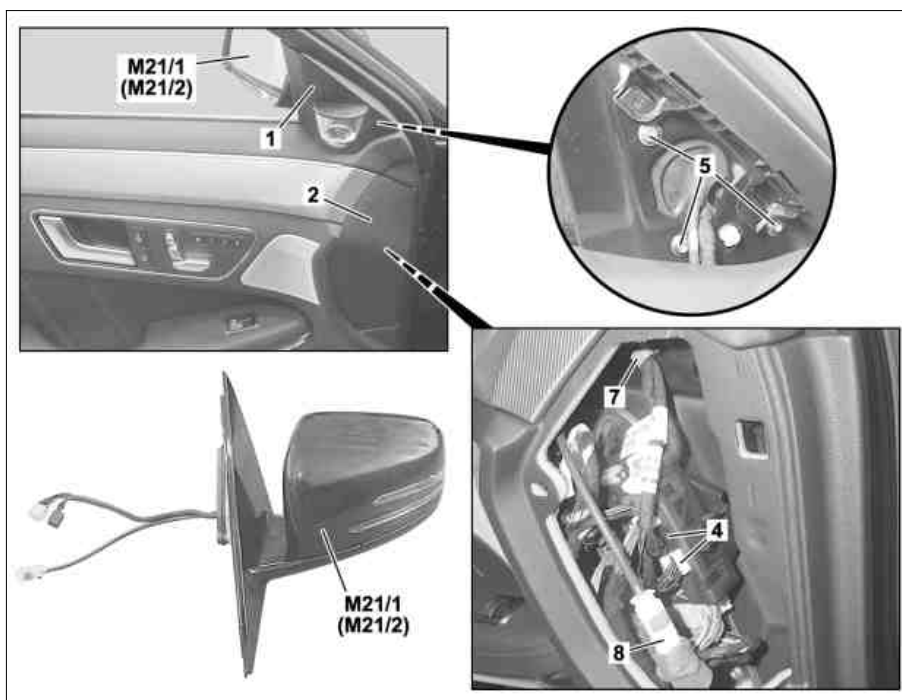


P88.70-2701-06

☒ ☒	Remove/install		
1	Unclip left and right mirror triangle paneling (1) and allow electrical line (6) to hang down	☑ Mounting wedge	*110589035900
2	Remove rear soundproofing from cover on mirror triangle (1)	MODEL 204, 216, 221	
3	Unclip window frame paneling in area of threaded connection on left outside mirror (M21/1) or right outside mirror (M21/2)	MODEL 204.9	
4	Unclip cover (2) from door lining (3) and remove	☑ Mounting wedge	*110589035900
5	Disconnect electrical connectors (4)		

6	Disconnect electrical connector (8)	MODEL 212 with CODE 501 (360 degree camera)	
7	Remove omega clip (7)	MODEL 204, 212	
8	Protection door lining (3) in area of bolts (5) against damage with adhesive tape	MODEL 207	
9	Remove bolts (5) and remove left outside mirror (M21/1) or right outside mirror (M21/2)	i Prevent screws (5) from falling.	
10	Install in the reverse order		
11	Calibrate 360° camera for left outside mirror (B84/7) or 360° camera for right outside mirror (B84/8) using Star Diagnosis	MODEL 212 with CODE 501 (360 degree camera)	

AD

AD00.00-P-2000-04A

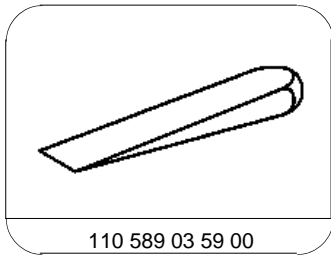

110 589 03 59 00

Mounting wedge