


Model 166, 204.3, 207.3, 212.0/1/2
with code 413 (Automatic panoramic sliding sunroof)

Shown on model 212.0 on left side of vehicle

- 1 Front Panoramic sliding sunroof
- 2 Bottom rubber
- 3 Top rubber
- 4 Support

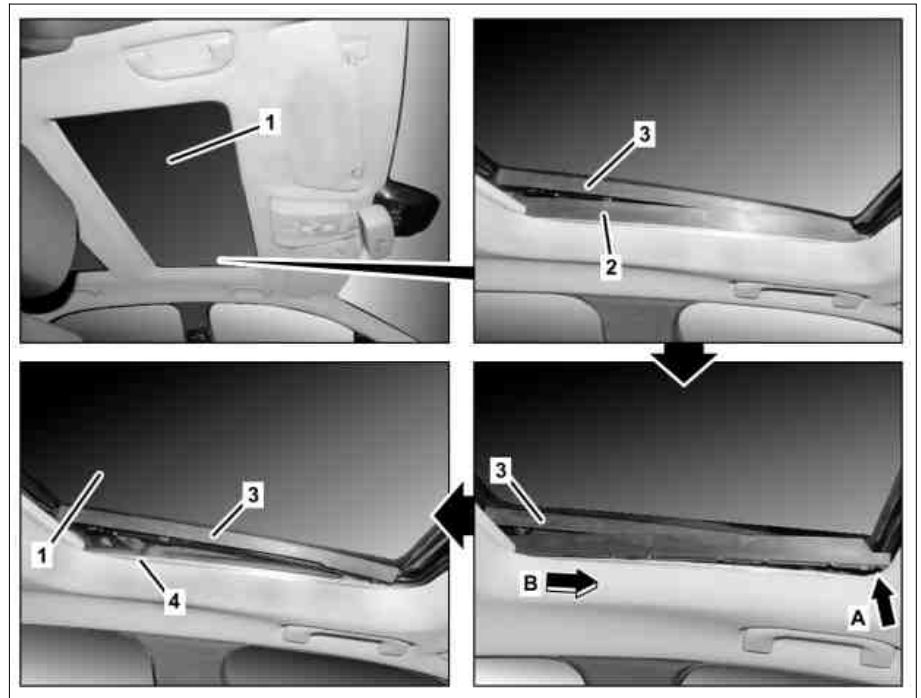

P77.21-2265-06

Danger !	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Remove/install		
1	Open roller sun blind, move front panoramic sliding roof (1) to tilt position		
2	Detach bottom rubber (2) in front area (arrow A) from the mount (4) on the panoramic roof rail and remove in the direction of the arrow (arrow B)		
3	Unclip upper rubber element (3) from front panoramic sliding roof (1) and remove		
4	Install in the reverse order		