


MODEL 204, 207, 212, 218

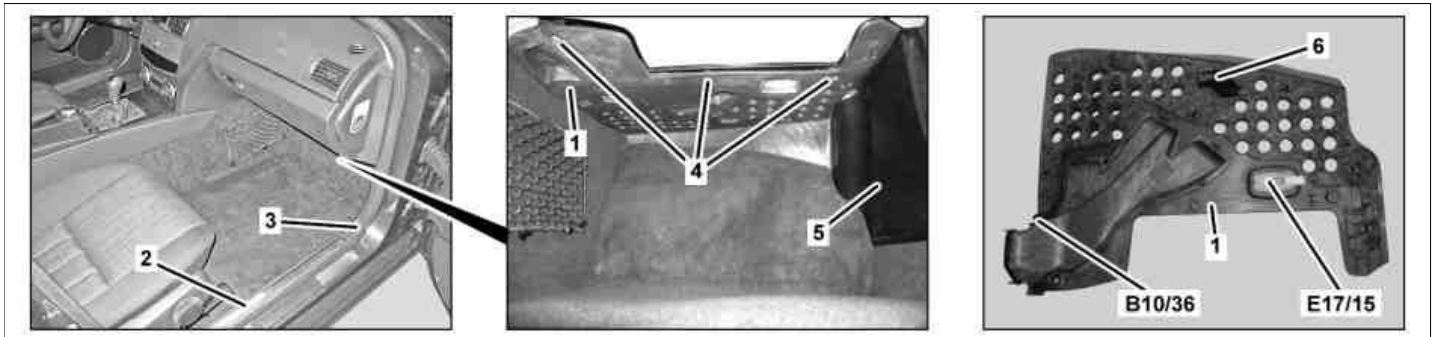

P68.10-3803-07

**Shown on model 204.0**

- 1 Cover  
2 Door sill molding  
3 Edge guard

- 4 Bolts  
5 Bottom of A-pillar paneling  
6 Catch hook

- B10/36 Right front footwell air outlet  
temperature sensor  
E17/15 Right front footwell lamp

☒ ☒	Remove/install		
1	Adjust right front seat toward rear to end position		
2	Remove door sill molding (2)	Model 204, 207	
3	Loosen edge guard (3) in area of bottom A-pillar paneling (5).	Model 204, 207	
4	Remove A-pillar paneling at bottom (5)	Model 204, 207	
5	Fold floor covering to passenger side	Model 212, 218	
6	Unscrew bolts (4) and lower cover (1)	<b>i</b> <b>Installation:</b> Guide catch hook (6) into corresponding lug on AC housing.	
7	Disconnect electrical connector from air outlet temperature sensor on right front footwell vent (B10/36) and right front footwell lamp (E17/15)		
8	Remove cover (1) out of the footwell		
9	Install in the reverse order		