

P88.20-3306-09


Shown on model 212.0

- | | |
|---------|-----------------------------|
| 1 Bolts | 4 Expansion clip |
| 2 Bolts | 5 Rear fender interior trim |
| 3 Screw | 6 Screw |

- | |
|----------------------------|
| 7 Hose |
| 8 Bracket (model 207, 212) |
| 9 Bracket |

Shown on model 212.0


- | |
|---------------------------------|
| 12 Nuts |
| 13 Rear center section paneling |
| 14 Service flap |
| 16 Wiring harness |
| 17 Grommet |
| 18 Bodywork |

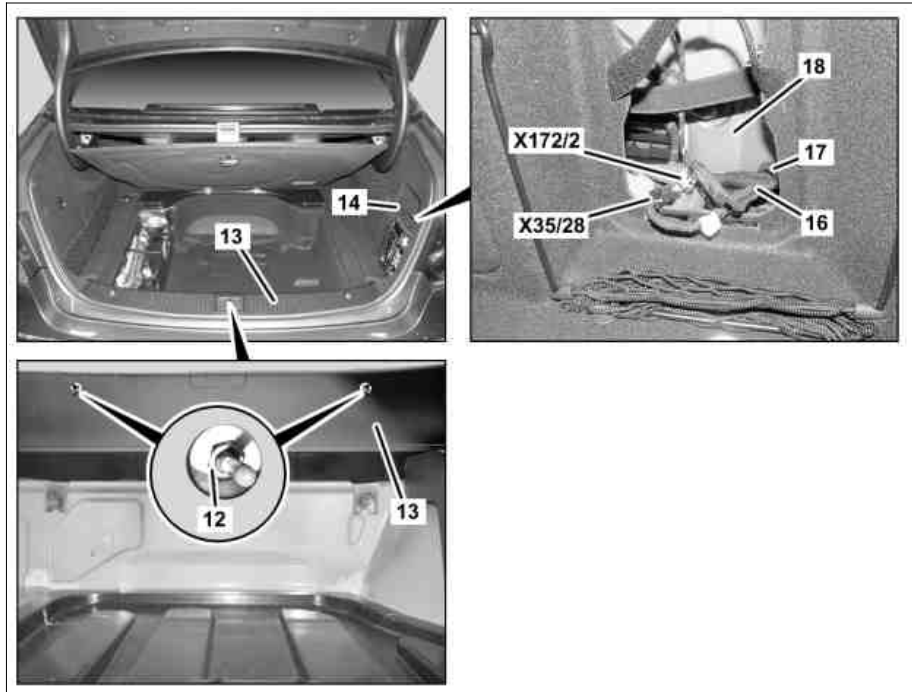

P88.20-3305-06

X35/28 Electrical connector for PARKTRONIC rear bumper (model 207, 212, 218.3 with code (220) PARKTRONIC or model 207, 212 with code (230) Exclusive parking aid or model 218.3 with code (235) Active Parking Assist)

X172/2 Electrical connector for radar sensors, rear bumper (model 212, 218.3 with code (234) Blind Spot Assist or model 218.3 with code (237) Blind Spot Assist)

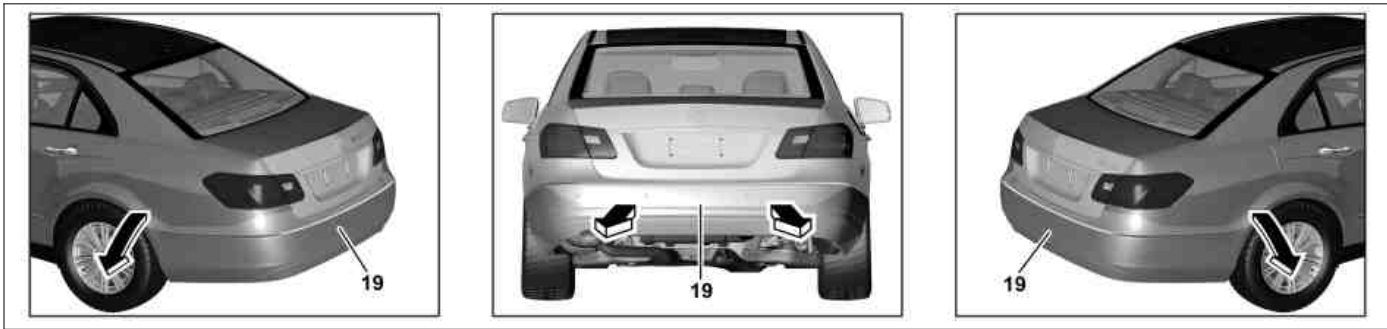

P88.20-3307-07

Shown on model 212.0

19 Rear bumper

☒ ☒	Remove/install		
⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
1	Lift vehicle on lifting platform.		
2	Unscrew bolts (1, 2)		
3	Remove bolts (3)	ⓘ On model 207 only bolt (3) on rear right is installed.	
4	Remove expansion clip (4) from left and right rear fender inner paneling (5)		
5	Loosen left and right rear fender paneling (5) until bolts (6) are accessible.		
6	Remove bolts (6)		
7	Unclip hose (7) from brackets (8, 9)	ⓘ On model 218.3 only the bracket (9) is installed.	
8	Remove rear center section paneling (13)	Model 207.4, 212.2 Model 212.0/1, 218.3 Model 207.3	AR68.30-P-4785EW AR68.30-P-4785EC
9	Unscrew nuts (12)		
10.1	Open service flap (14)	Model 212.0/1, 218.3	
10.2	Remove right interior trim in side cargo area and loosen insulation behind	Model 212.2	
11	Disconnect electrical connector from rear bumper radar sensor (X172/2)	Model 212, 218.3 with Code (234) Blind Spot Assist Model 218.3 with Code (237) Blind Spot Assist	
12.1	Disconnect electrical connector from rear bumper PARKTRONIC (X35/28) in area of rear center section	Model 207 with code (220) PARKTRONIC or with code (230) Exclusive parking assist	
12.2	Disconnect electrical connector from rear bumper PARKTRONIC (X35/28) in area of open service flap (14)	Model 212, 218.3 with code (220) PARKTRONIC, model 212 with code (230) Exclusive Parking Assist Model 218.3 with code (235) Active Parking Assist	
13	Guide electric wiring harness (16) and grommet (17) through body (18)		
14	Unclip rear bumper (19) at sides and rear starting at rear fender (arrows) and remove rear bumper (19) with aid of helper.	ⓘ On model 207 carefully loosen rear bumper (19) in area of taillamps and fasten to prevent damaging the paint or the rear bumper (19).	
15	Install in the reverse order		