


Shown on driver side on model 204


- 1 Mirror triangle paneling
- 2 Cover
- 3 Door lining
- 4 Electrical connectors
- 5 Bolts
- 6 Electrical line
- 7 Omega clip

- M21/1 Left outside mirror
- M21/2 Right outside mirror

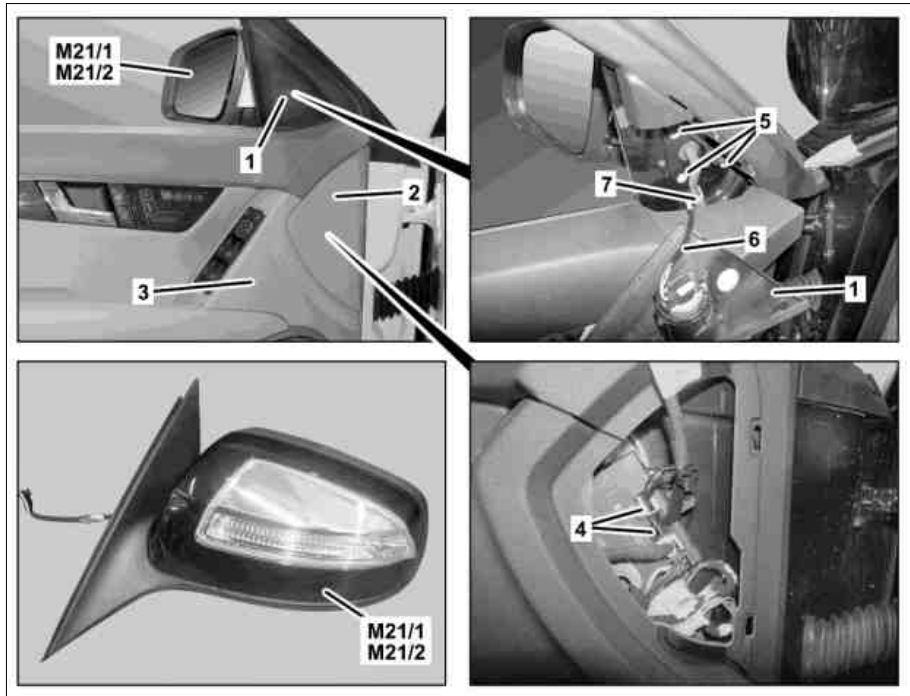

P88.70-2482-06

☒ ☒	Remove/install		
1	Unclip left and right mirror triangle paneling (1) and allow electrical line (6) to hang down	☒	*110589035900
2	Remove rear soundproofing from cover on mirror triangle (1)	Model 204, 216, 221	
3	Unclip window frame paneling in area of threaded connection on left outside mirror (M21/1) or right outside mirror (M21/2)	On model 204.9	
4	Unclip cover (2) from door lining (3) and remove	☒	*110589035900
5	Separate electrical connectors (4)		
6	Remove omega clip (7)	on MODEL 204, 212	
7	Protection door lining (3) in area of bolts (5) against damage with adhesive tape	On model 207	
8	Remove bolts (5) and remove left outside mirror (M21/1) or right outside mirror (M21/2)	i Prevent screws (5) from falling.	
9	Install in the reverse order		

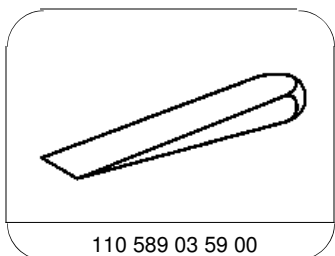

110 589 03 59 00

Mounting wedge