

P61.30-2031-08



Shown on left underfloor paneling (1)

1 Underbody paneling

	Remove/install		
1	Risk of death caused by vehicle slipping or toppling off of the lifting platform. Raise vehicle with vehicle lift	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer. Adapter kit	AS00.00-Z-0010-01A *203589023100
2	Unscrew nuts (arrows A)	Installation: Carefully tighten nuts (arrows) by hand to prevent damaging bolts on undercarriage. Removal: Unscrew nuts (arrows A) with cordless drill/driver. Rechargeable drill / screwdriver gotis://G_58.0_01.1	*BA61.30-P-1001-02A
3	Unscrew bolts (arrows B and arrow C)	Rechargeable drill / screwdriver gotis://G_58.0_01.1	
4	Detach rear bottom section of soundproofing and engine compartment paneling until underfloor paneling (1) can be removed.	Rear bottom section of soundproofing according to vehicle equipment.	
5	Remove expansion clips (arrows D) and remove underfloor paneling (1)	Clip remover	*452589016300
6	Install in the reverse order		

Underfloor paneling

Number	Designation	Model
		212, 218
BA61.30-P-1001-02A	Nut, underfloor paneling to vehicle floor	Nm 2.5

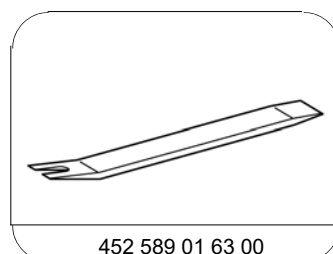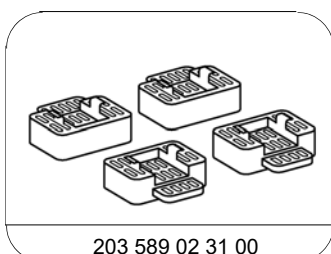

Adapter kit

Snap-release tool