


Model 238
with code P21 (Air quality package)

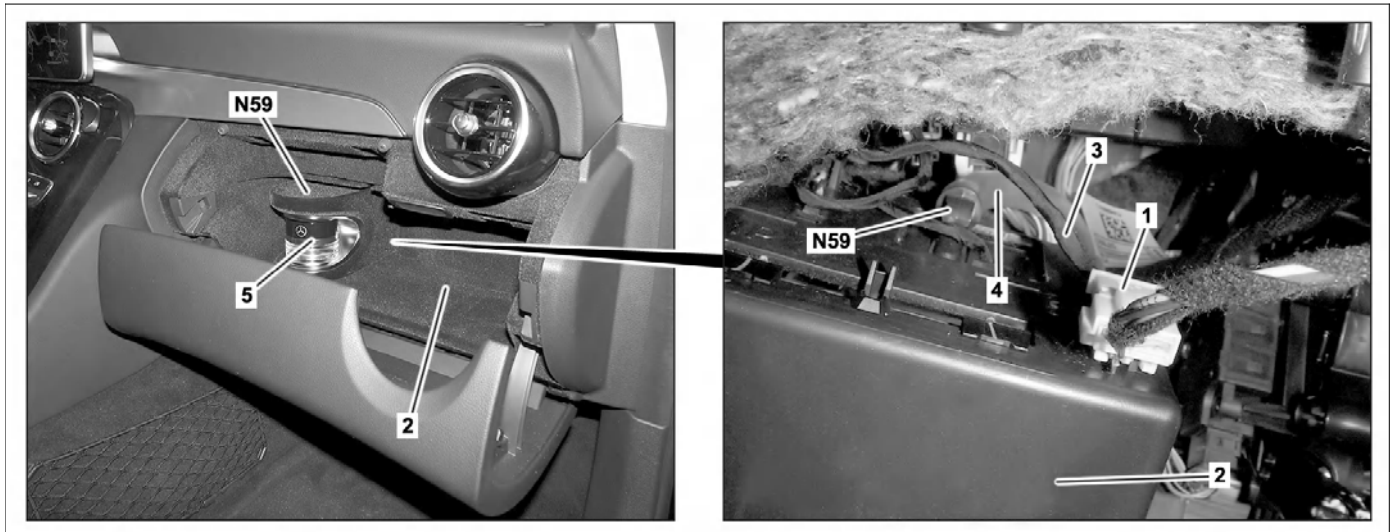


P83.40-5126-08

- 1 Electrical connector
- 2 Glove compartment
- 3 Electrical wiring harness

- 4 Hose
- 5 Vial
- N59 Perfume atomizer generator

- 2 Glove compartment
- 6 Catch hook
- 7 Recesses
- N59 Perfume atomizer generator

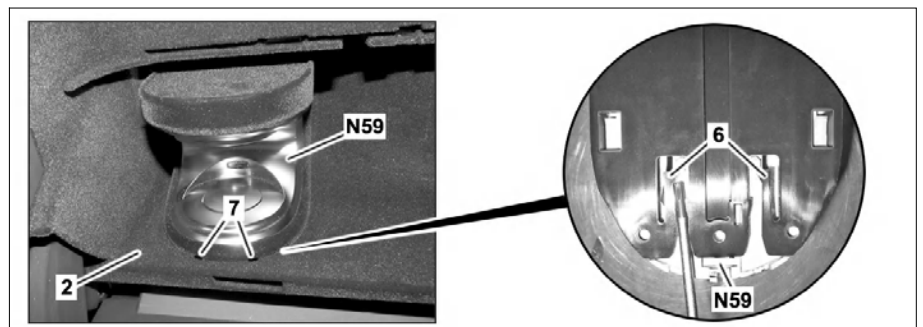

P83.40-5127-04

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Remove panel under passenger-side instrument panel		AR68.10-P-1502LWE
2	Disconnect electrical connector (1) from glove compartment (2) and expose electrical wiring harness (3)		
3	Disconnect electrical connection (1)		
4	Unplug hose (4) from perfume atomizer alternator (N59)	Installation: Ensure that hose (4) is seated correctly.	
5	Open flap on glove compartment (2)		
6	Remove vial (5)		
7	Release catch hooks (6) by inserting an appropriate tool through cutouts (7)		
8	Remove perfume atomizer alternator (N59)		
9	Install in the reverse order		