


Model 213

Model 238

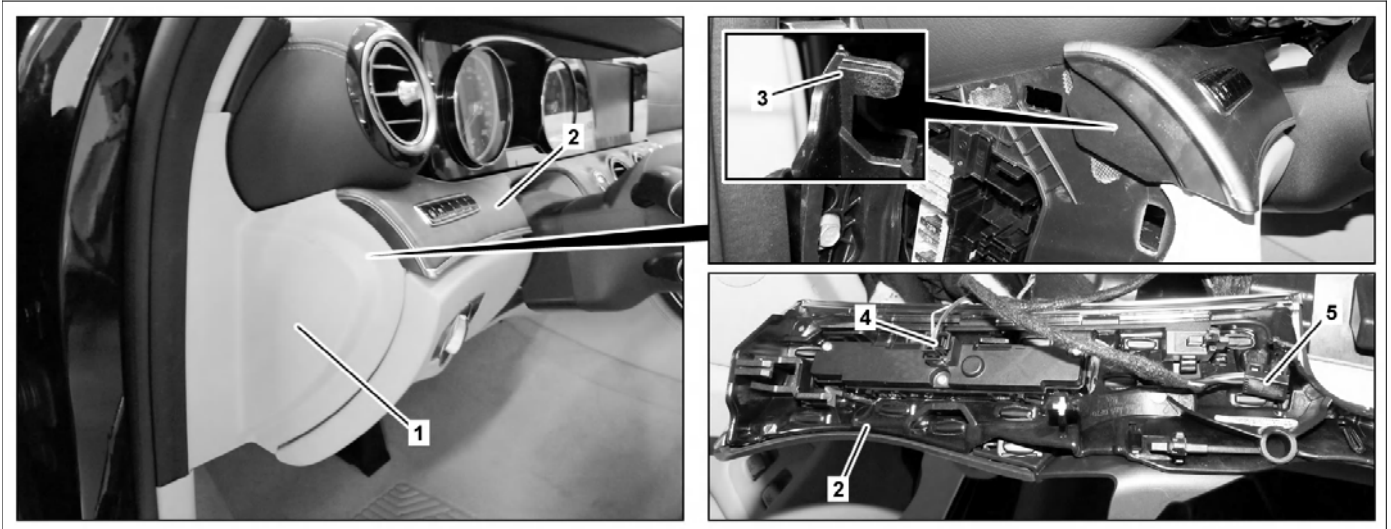


P68.10-4975-08

1 Cover
2 Driver side trim piece

3 Catch hook
4 Electrical connector

5 Light-emitting diode

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Loosen edge guard in area of cover (1)	Installation: Ensure that edge guard is seated correctly.	
3	Remove cover (1)	Mounting wedge	*110589035900
4	Unclip driver side trim piece (2) at bottom over entire length	Start to unclip in area of steering column Mounting wedge	*110589035900
5	Push driver side trim piece (2) to left and disengage from catch hook (3)		
6	Disconnect light-emitting diode (5) from optical fiber	Model 213, 238 with code 877 (ambient lighting)	
7	Disconnect electrical connection (4)	Model 213, 238 with code 233 (DISTRONIC PLUS) Model 213, 238 with code 243 (Lane keeping assist) Model 213, 238 with code 463 (Head-up display) Model 213 with code 235 (Parking Pilot) with code 489 (AIRMATIC) Model 238 with code 235 (Parking Pilot) with code 489 (AIR BODY CONTROL)	
8	Remove driver side trim piece (2)		
9	Install in the reverse order		

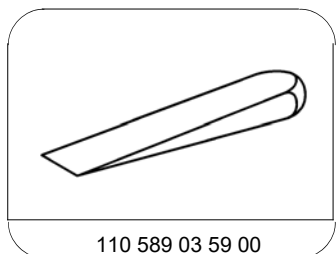

110 589 03 59 00

Mounting wedge