


Model 213.0


Shown with removed side paneling

- 1 Cover
- 2 C-pillar paneling
- 3 Cover
- 4 Clip

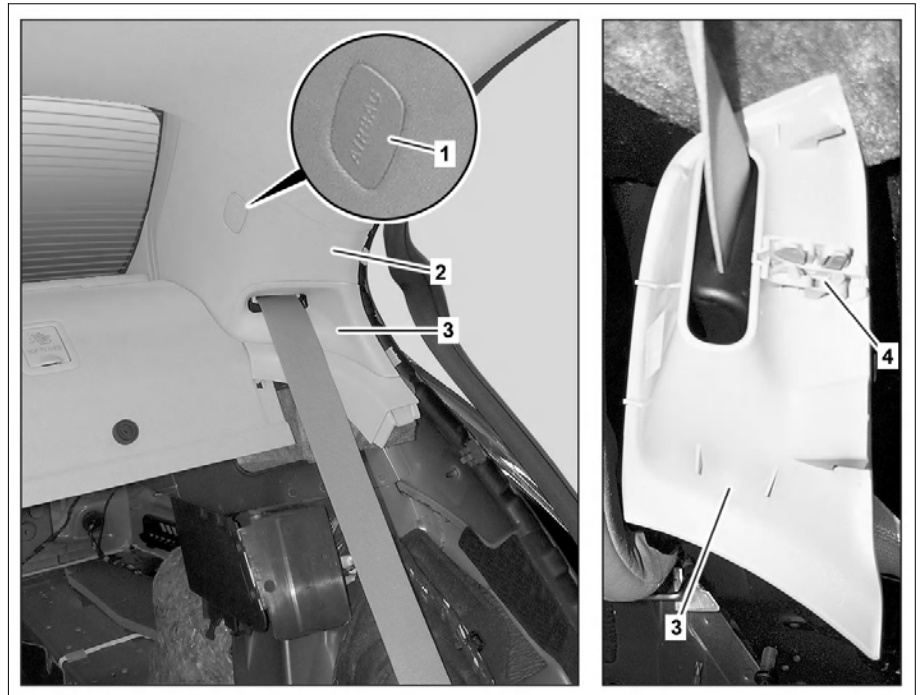

P68.30-3868-06

☒ ☒	Remove/install		
1	Remove edge guard in area of C-pillar (2)	i Installation: Ensure that edge guard is seated correctly.	
2	Unclip cover (1)	i Retaining clip remains in C-pillar paneling (2). S Clip remover	*452589016300
3	Loosen C-pillar paneling (2) on C-pillar and rear side paneling, slightly tilt toward center of vehicle and remove toward front	⚠ Carefully remove C-pillar paneling (2). Otherwise roof paneling can be damaged. i Installation: Ensure that C-pillar paneling (2) is seated correctly.	
4	Remove cover (3) from C-pillar paneling (2)		
5	Remove clamp (4)	i Installation: Ensure that clip (4) is seated correctly.	
6	Guide seatbelt through opening in cove (3) and C-pillar paneling (2)		
7	Install in the reverse order		

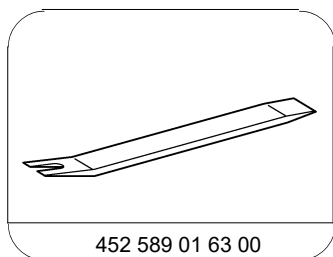

452 589 01 63 00

Clip remover