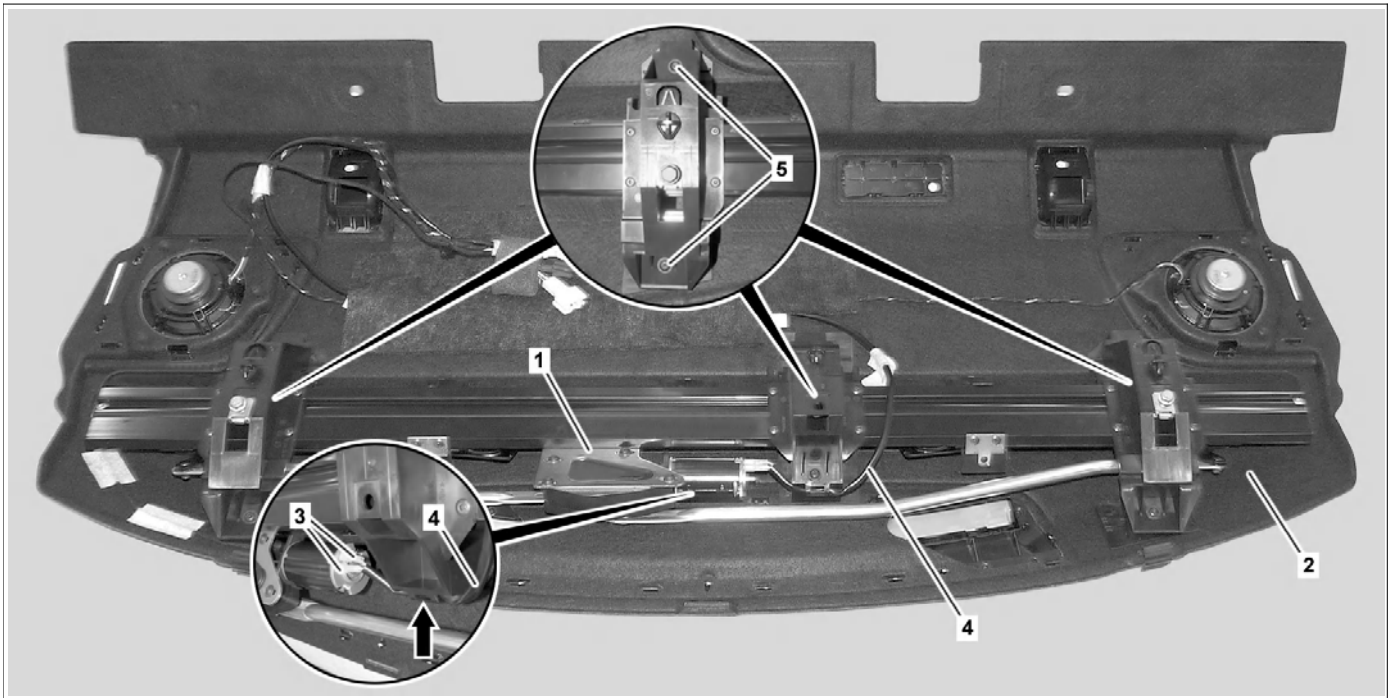






Model 205.0/1  
with code 540 (Electric roller blind for rear window)



P68.50-2616-09

1 Roller sun blind  
2 Rear shelf  
3 Electrical connectors

4 Electrical wiring harness  
5 Bolts

|   | Remove/install   |  |                  |
|--|--|--|------------------|
| 1  | Remove rear shelf (2)  |  | AR68.30-P-4581LW |
| 2  | Mark electrical connectors (3)   |  |                  |
| 3  | Detach electrical connections (3)  |  <b>Installation:</b> Observe marking.  |                  |
| 4  | Unhook electrical wiring harness (4) from bracket (arrow) and remove from working area |  |                  |
| 5  | Remove screw/bolts (5)   |  |                  |
| 6  | Remove roller sun blind (1)  |  <b>Installation:</b> Ensure that roller sun blinds (1) are seated correctly in rear shelf (2). |                  |
| 7  | Install in the reverse order   |  |                  |