



Model 213.2

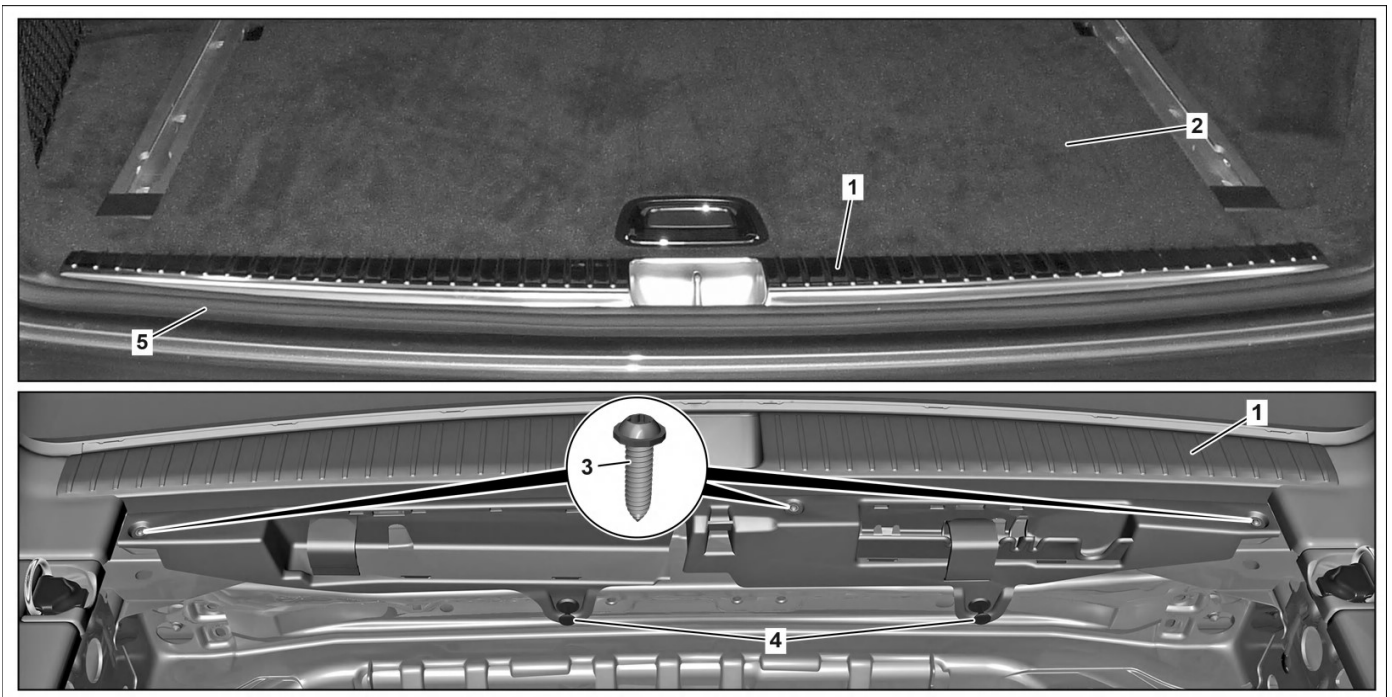

P68.30-3927-09

- 1 Rear center section paneling
- 2 Load compartment floor rear section
- 3 Screw
- 4 Retaining clips
- 5 Frame seal

<b>Danger!</b>	<b>Risk of injury</b> caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Notes on sensor system for trunk lid opening/closing	Model 213.2 with code P17 (KEYLESS-GO package)	AH80.61-P-0001-01A
	<b>Remove/install</b>		
1	Fold over load compartment floor rear section (2)		
2	Remove bolts (3)		
3	Remove retaining clips (4)		
4	Unclip rear center section paneling (1) and remove	<b>Installation:</b> Ensure that sealing frame (5) is seated correctly. Mounting wedge	*110589035900
5	Install in the reverse order		

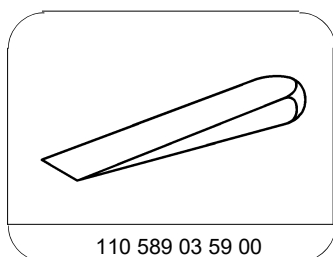

110 589 03 59 00

Mounting wedge